




REMOVAL

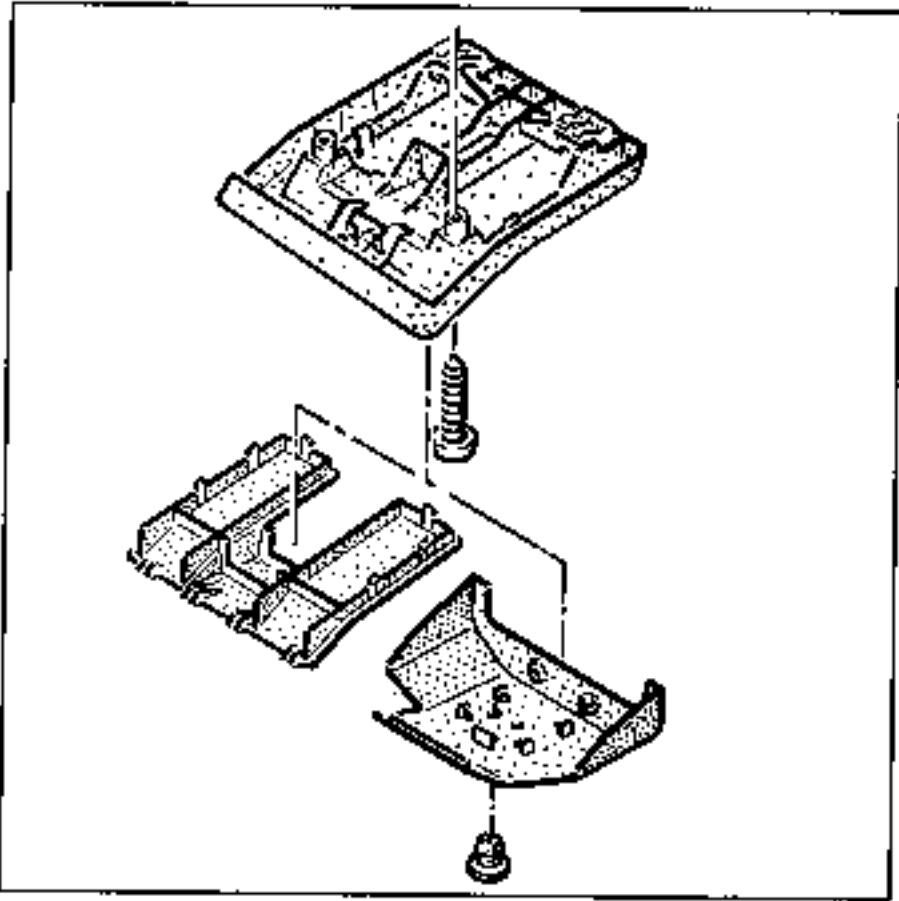

Remove the roof console.

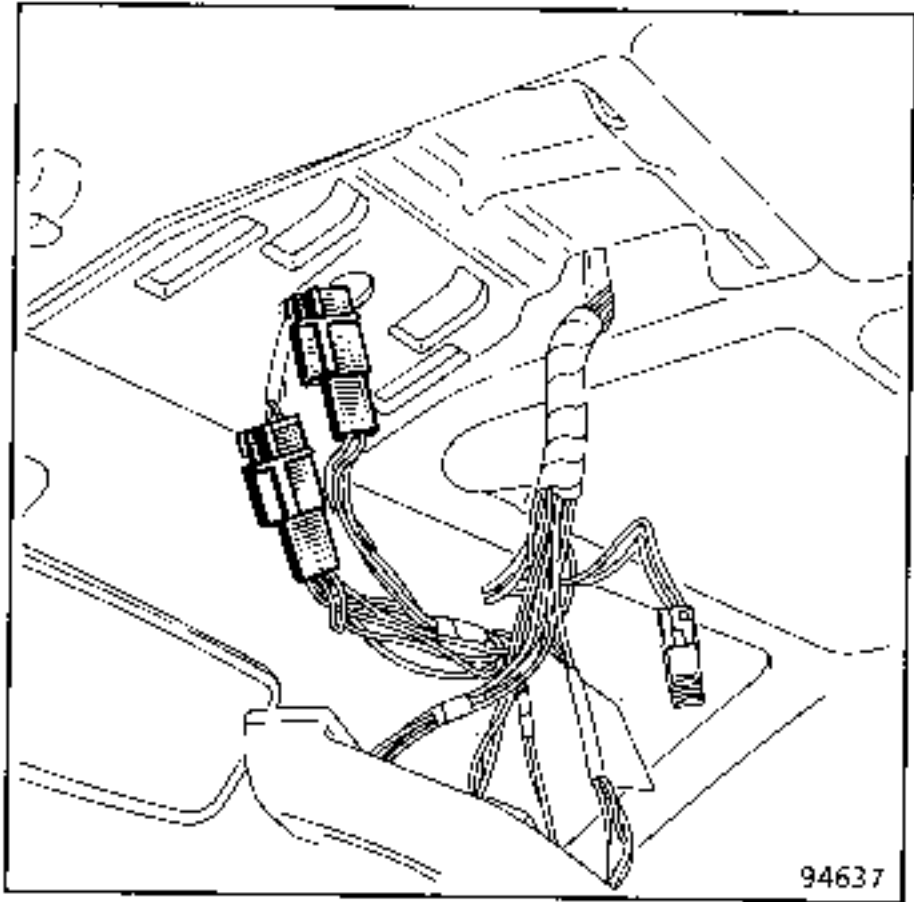

Disconnect the wiring harness from the sun vizor in question.

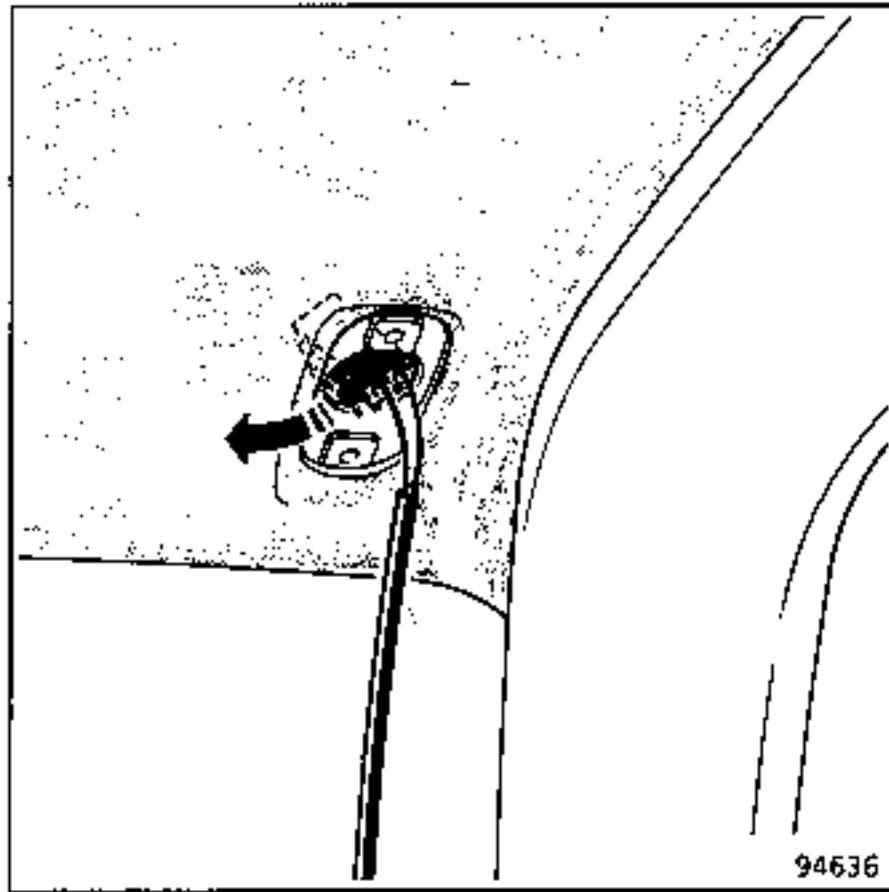


Remove the screws from the sun vizor.

Take out the connector in the position shown.


SUN VIZOR BULBS

BULB REMOVAL.

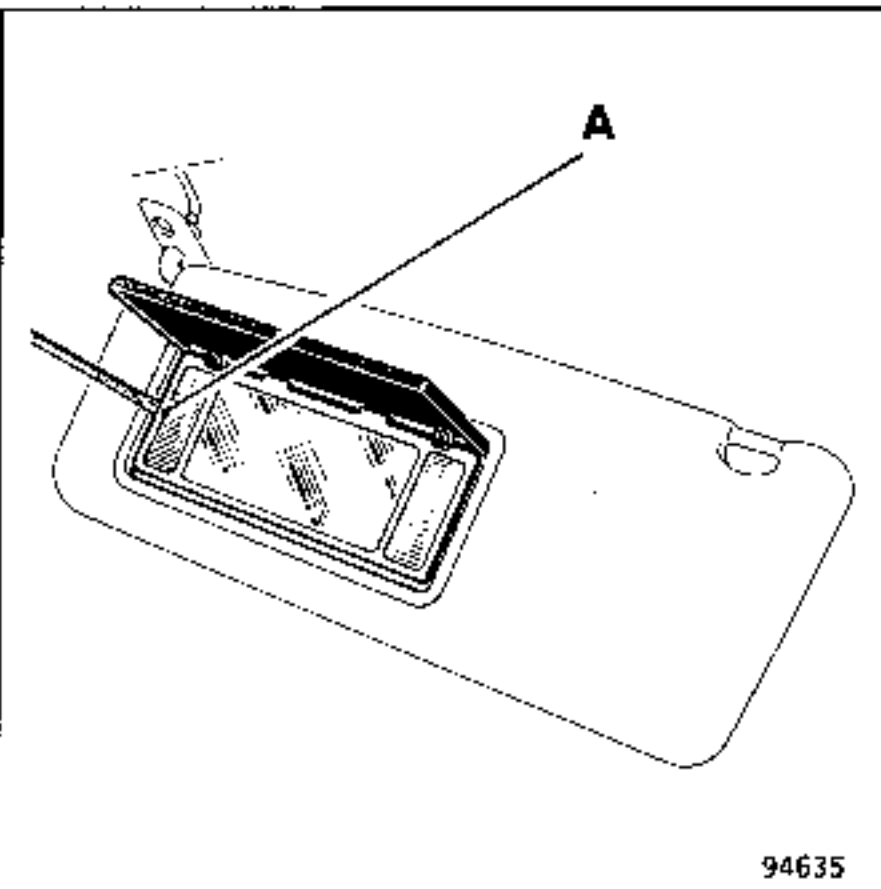


Open the courtesy mirror cover.

Unclip mirror assembly (A) at the side.

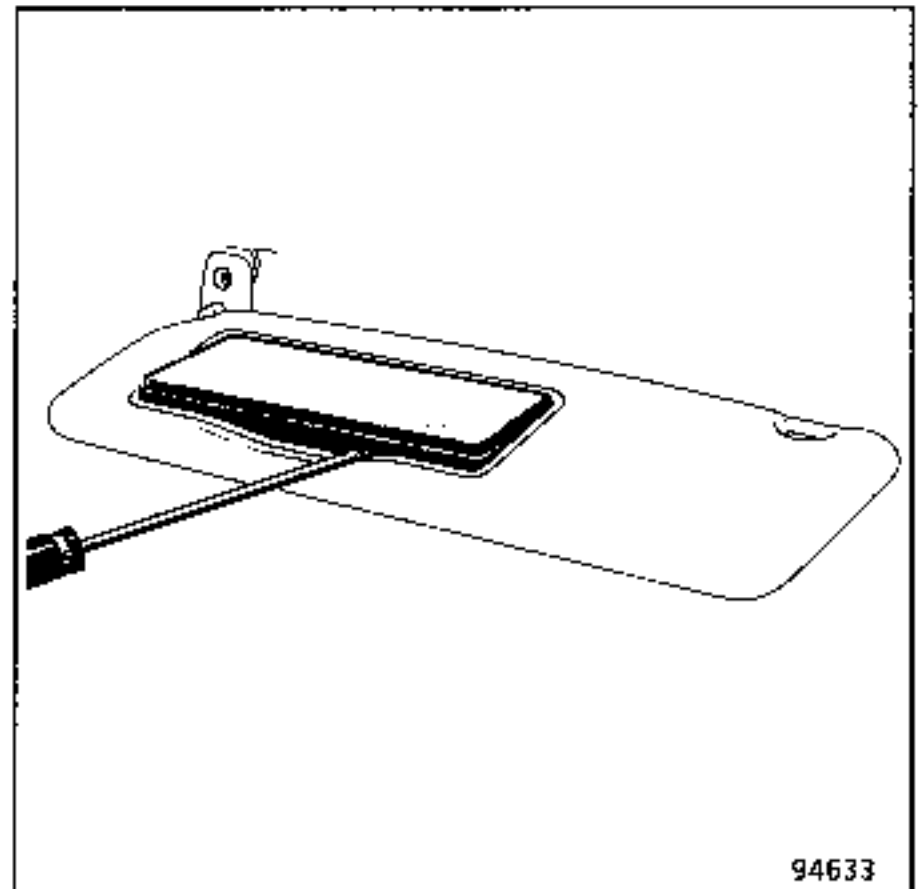


Close the mirror cover to prevent the springs falling out.


Finish by unclipping the assembly.

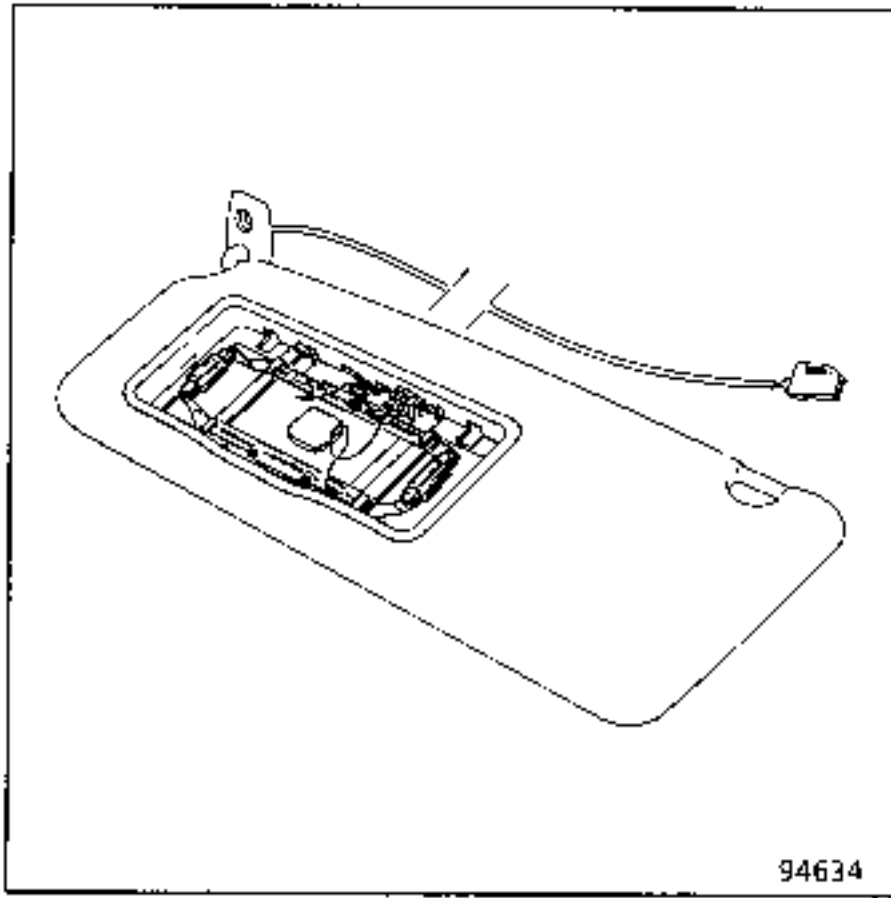



Remove the bulb or bulbs.

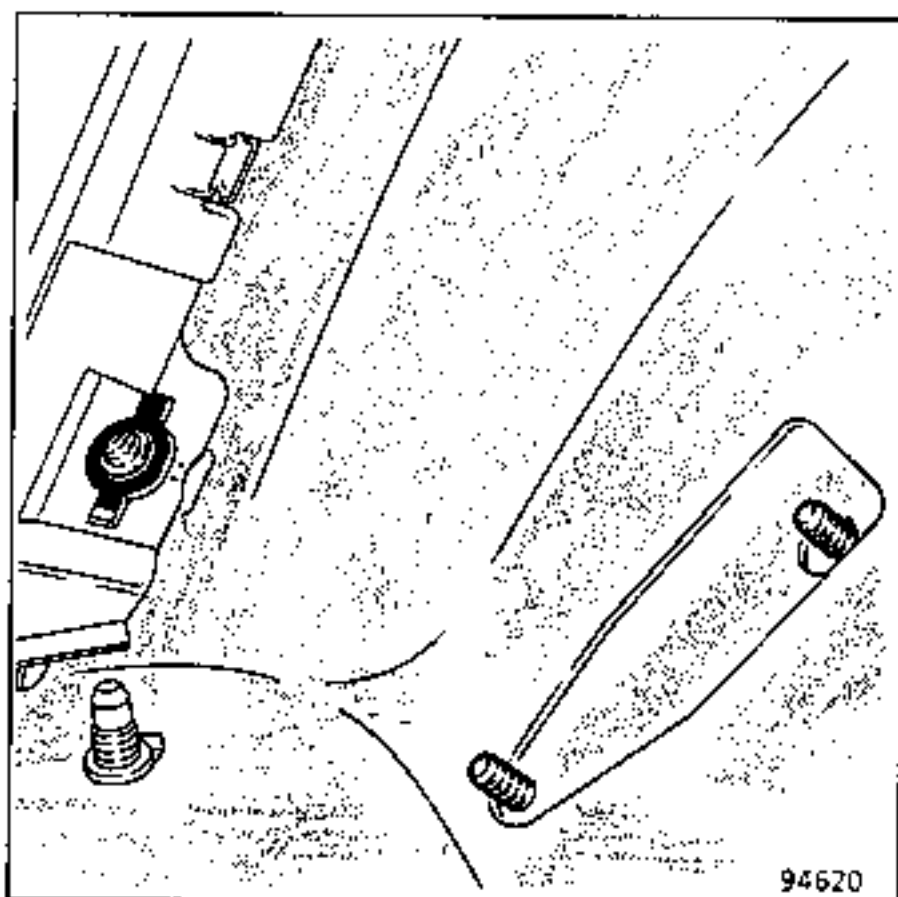

Remove the lower mounting bolt from the bodywork.

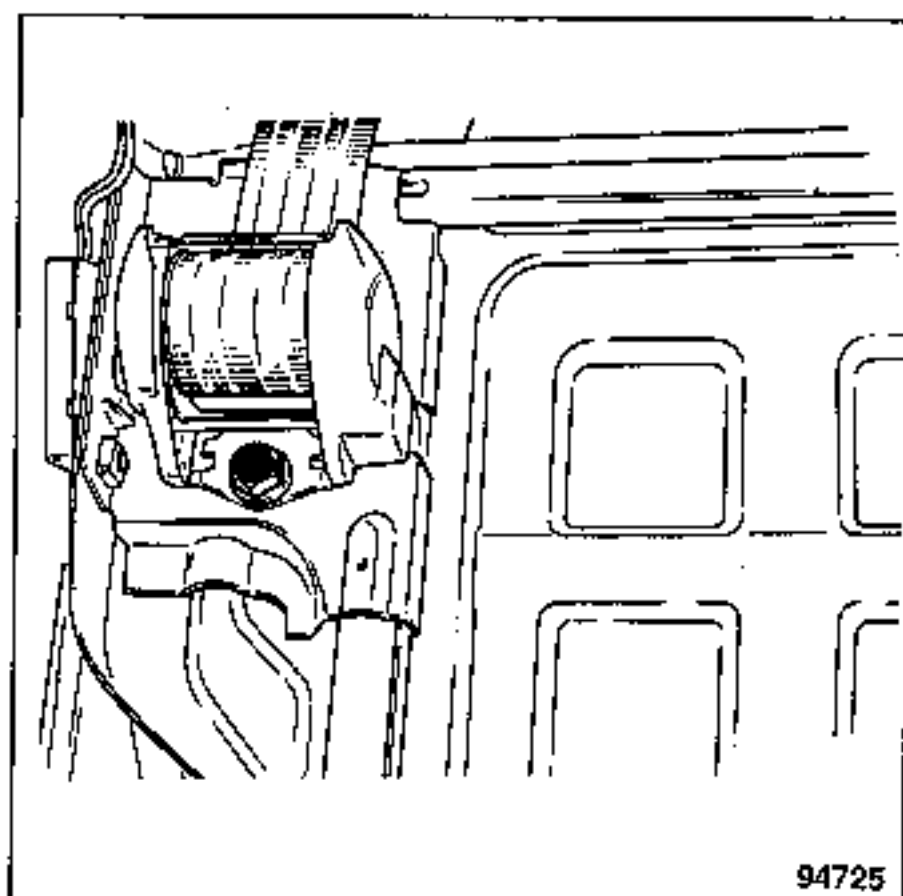


After stripping the seat back, remove the seat belt mounting.

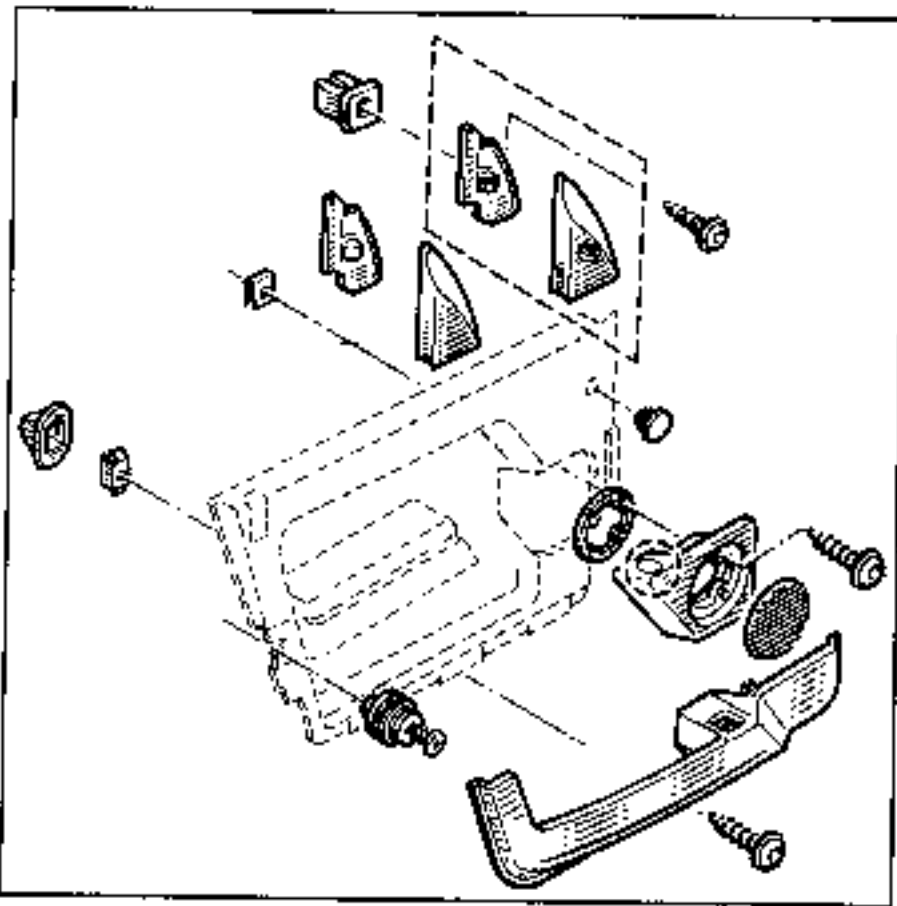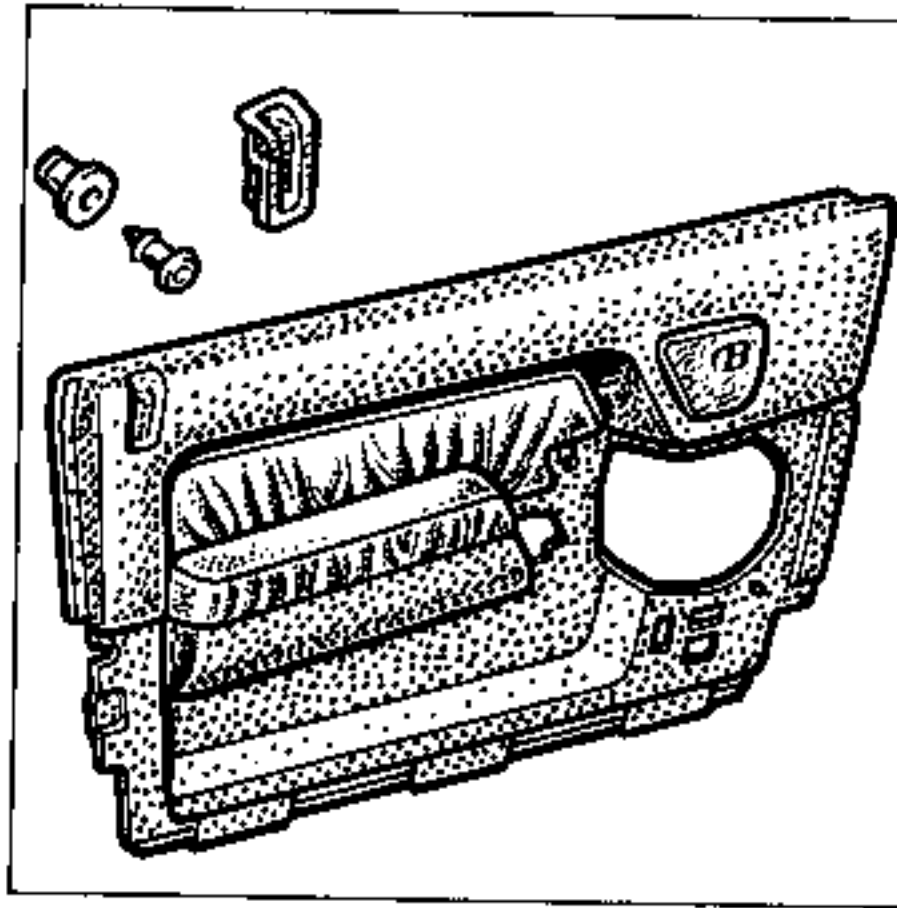



Remove:

- The rear view mirror cover.
- The grille and speaker.
- The speaker.

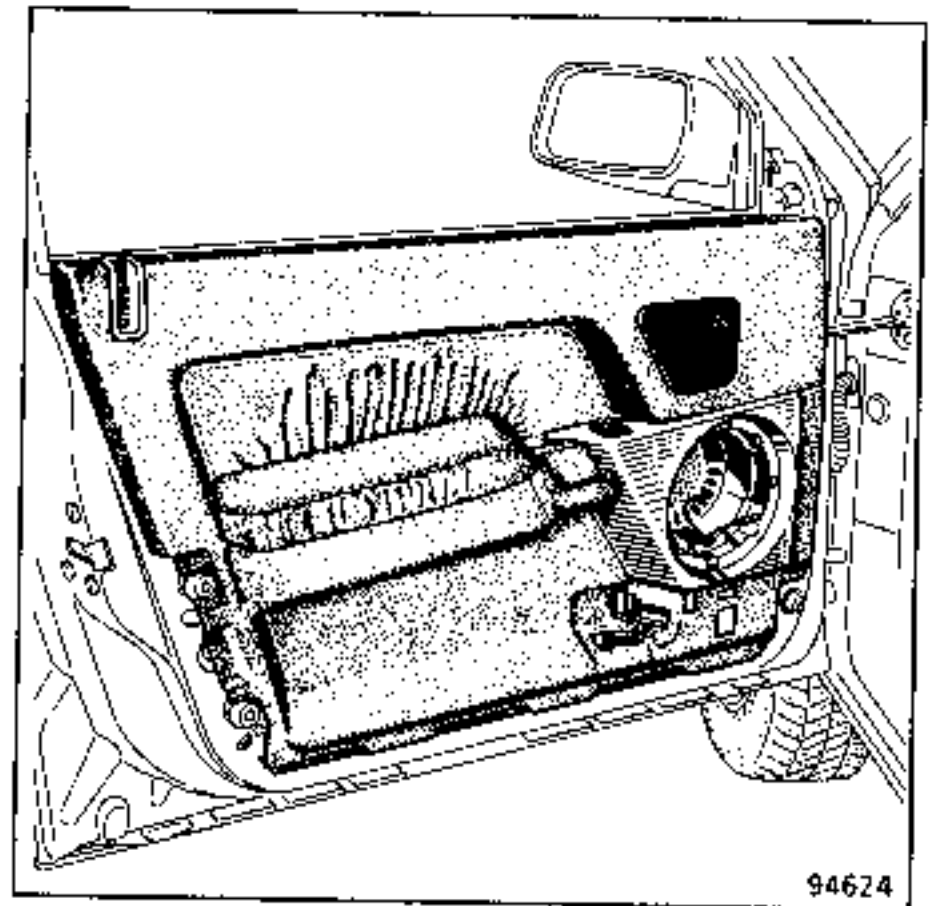

Remove:

- The window winder controls;
- The glove compartment;
- The inner handle;
- the telltale indicating whether the door is locked or unlocked.
- Unpick the trim.

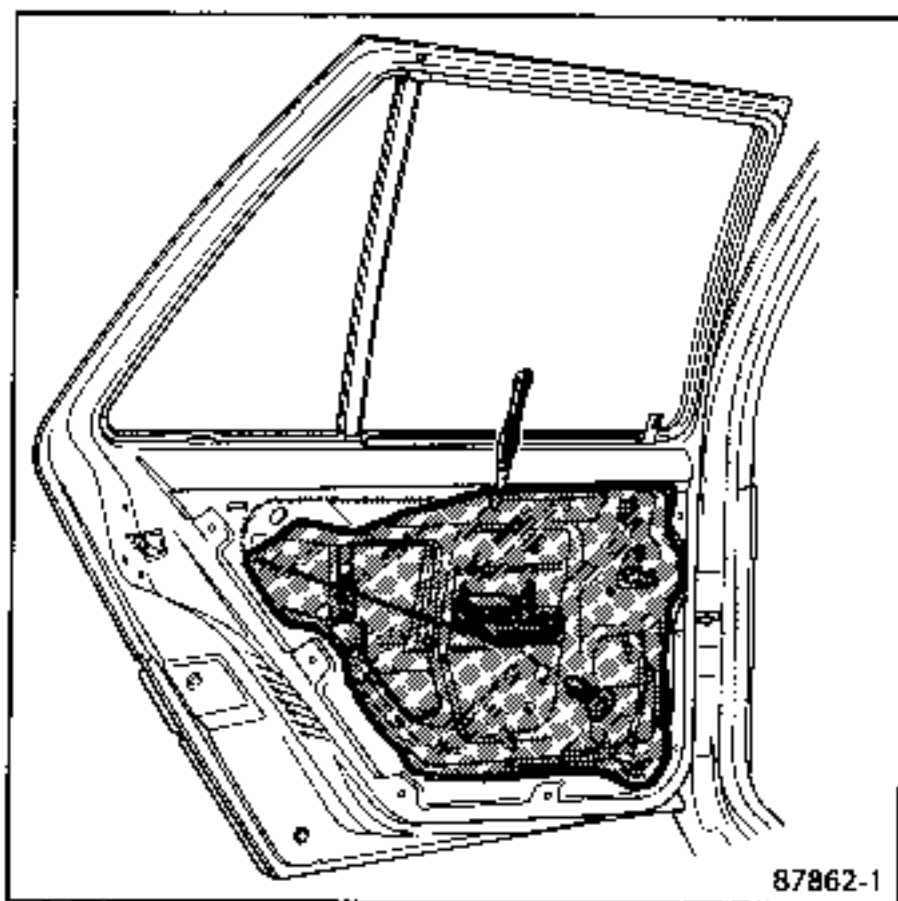
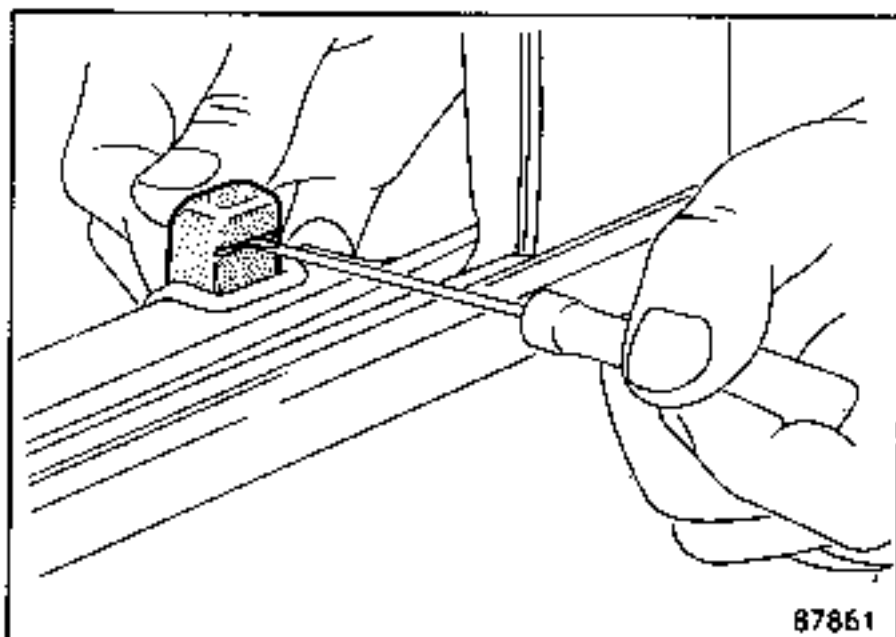


NOTE:

For reasons of quality, after any operations requiring the vinyl panel to be removed, it is essential to replace the bead of sealing mastic, before refitting the vinyl door panel.


Roll of Mastic

Part No: 77 01 423 330

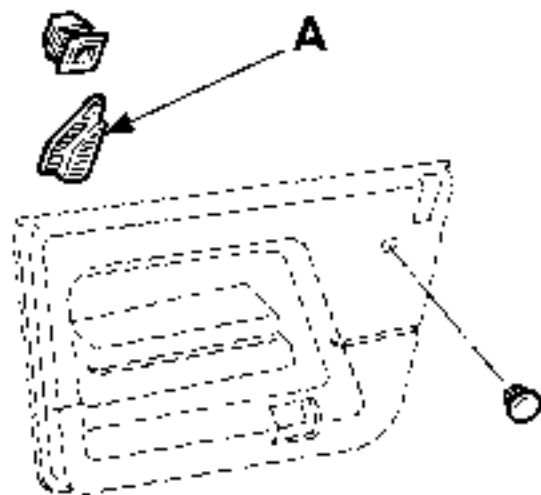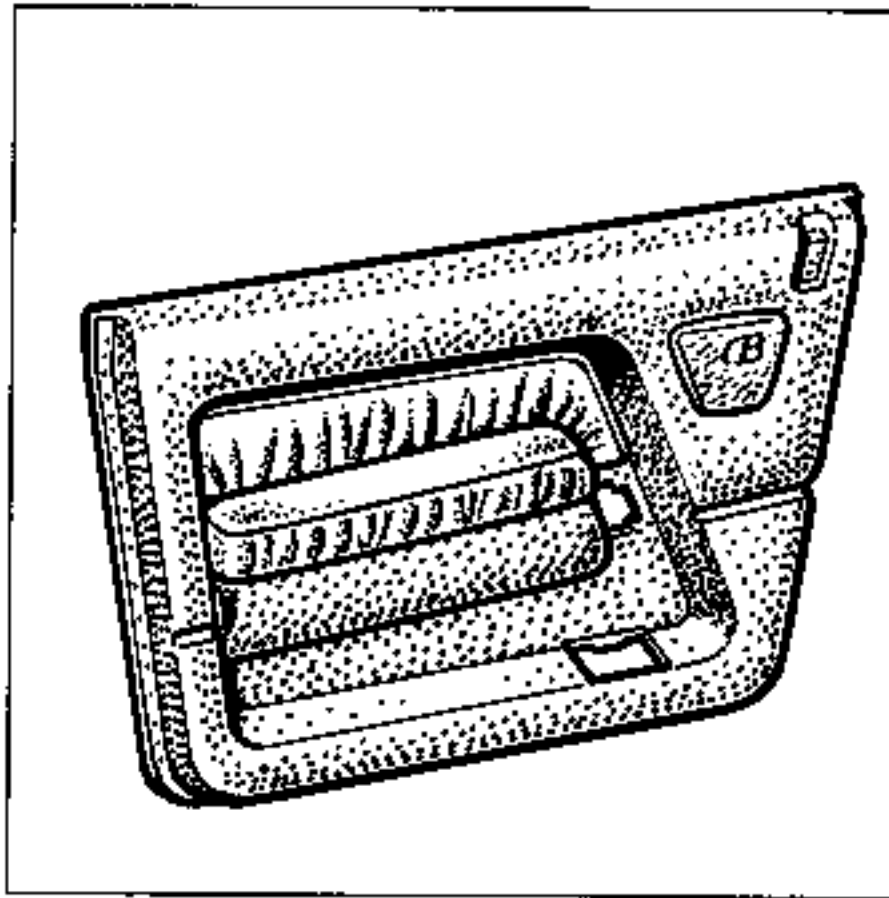

Remove :

- cover (A);
- the telltale indicating whether the door is locked or unlocked

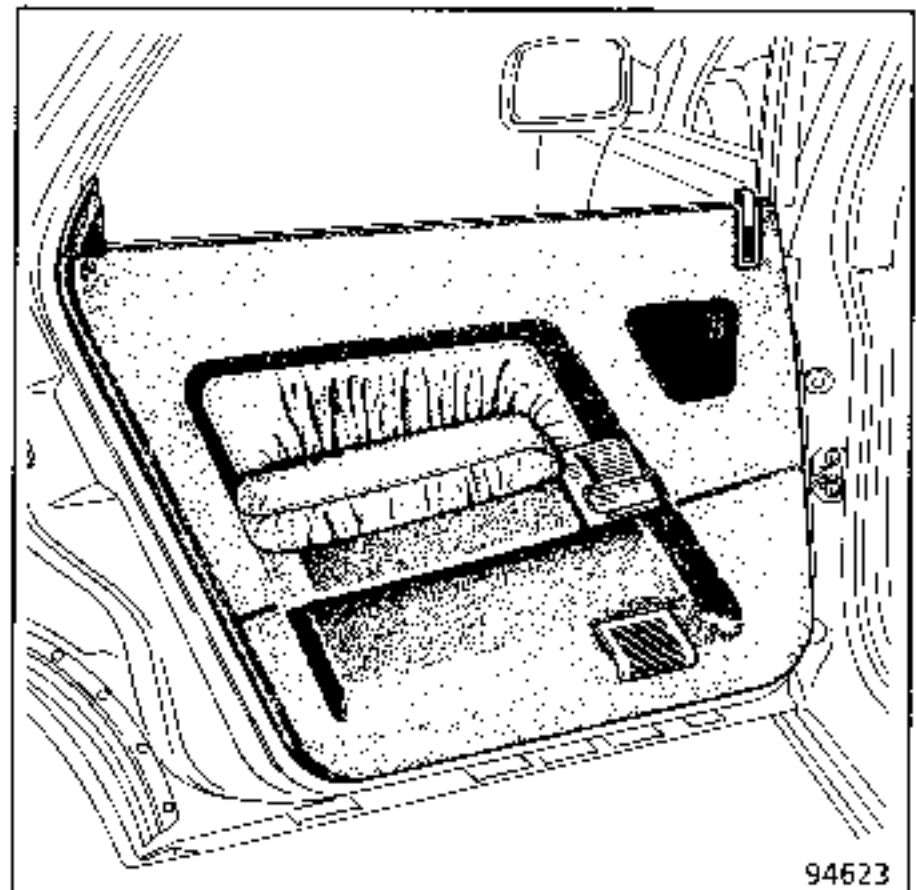

Remove :


- the inner handle,

NOTE:



For reasons of quality, after any operation requiring the vinyl panel to be removed, it is essential to replace the bead of sealing mastic before refitting this vinyl panel.

Roll of Mastic

Part No: 7701 423 330

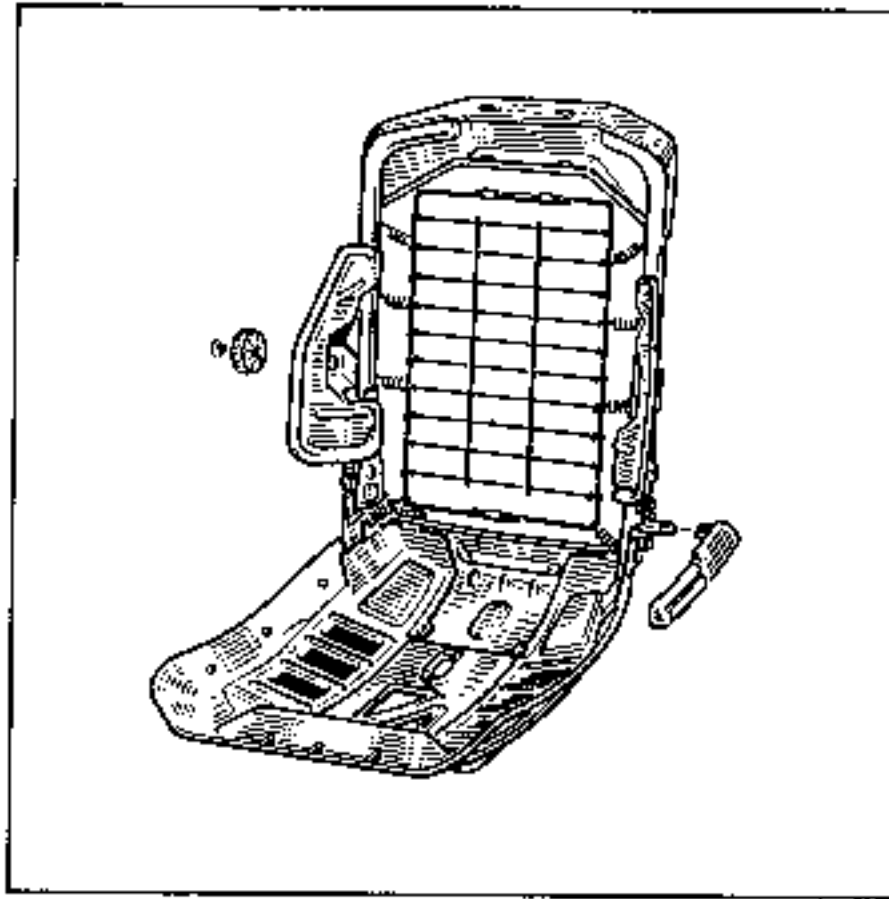


REMOVAL.

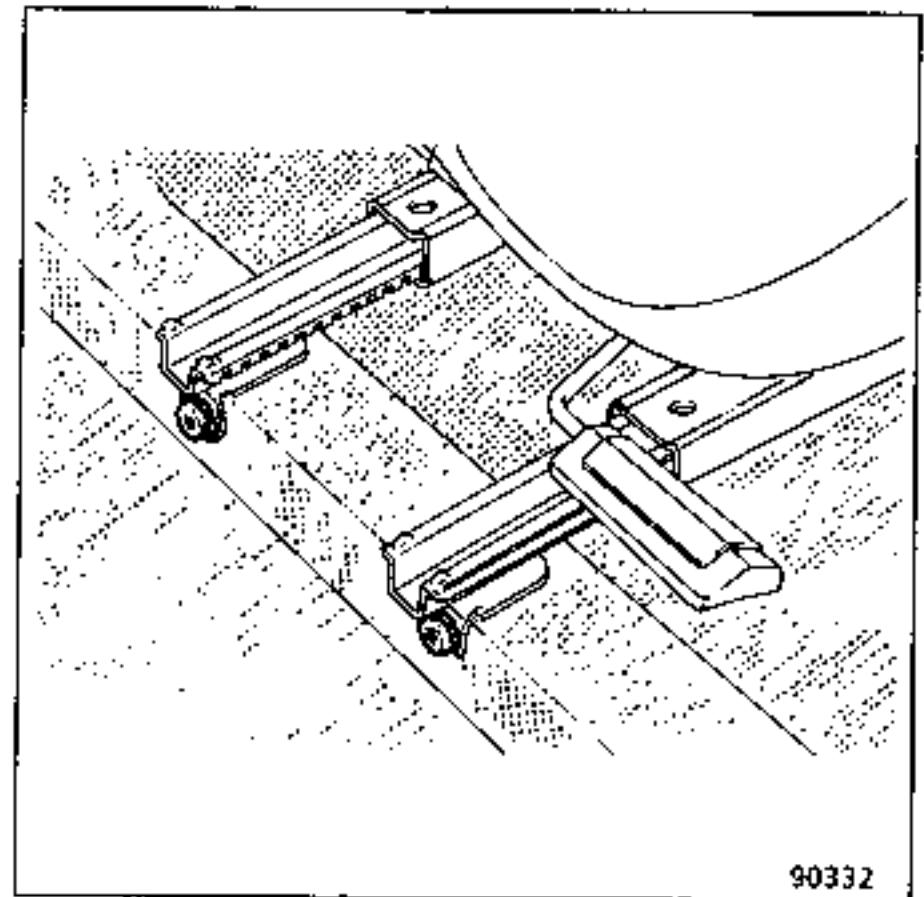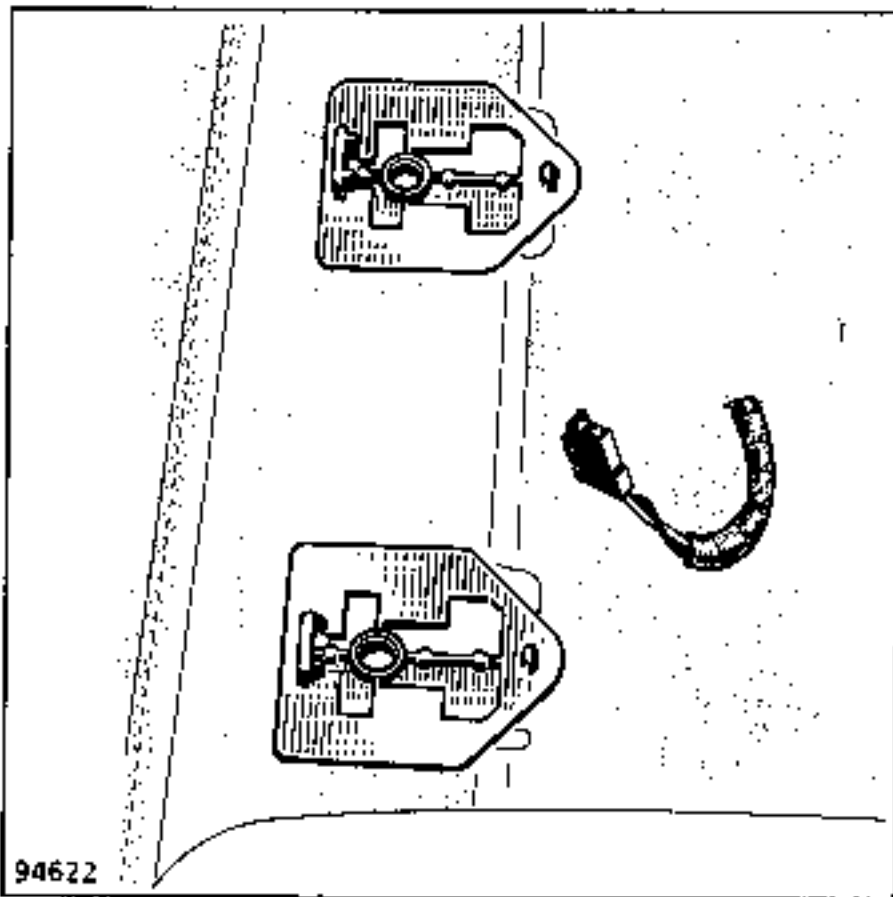


Move the seat forwards and disconnect the connector from the heated seat wiring harness.

Remove the 2 front mounting bolts.

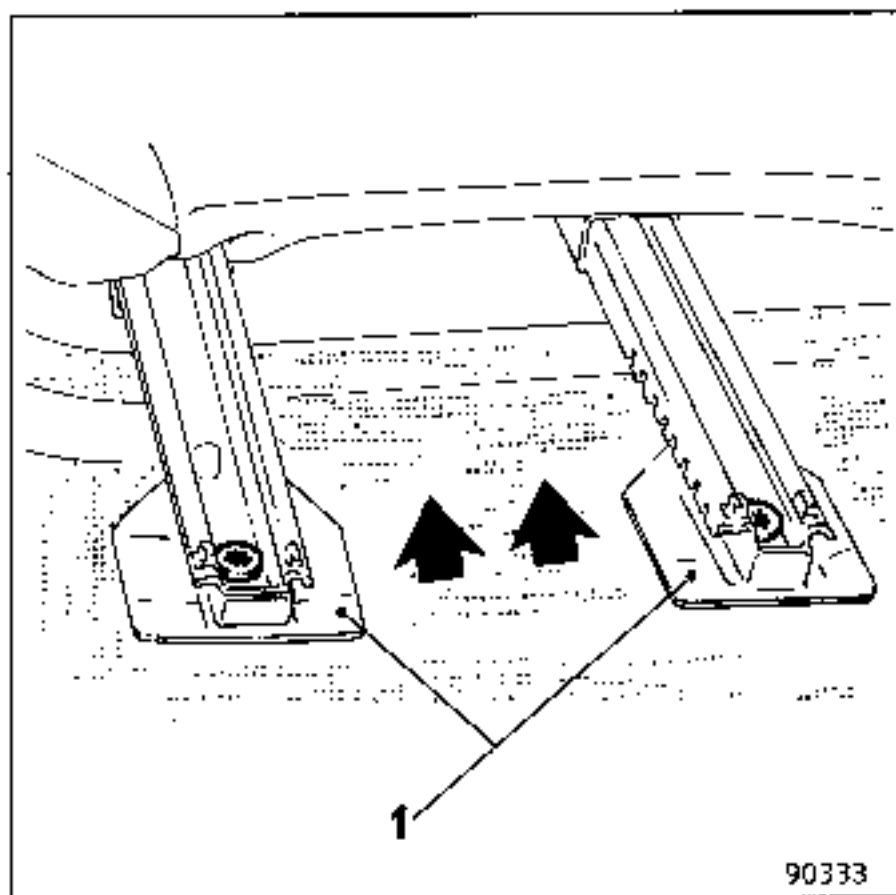

Remove the 2 rear bolts:


- the seat with the 2 anchorage plates (1), pulling it forwards.

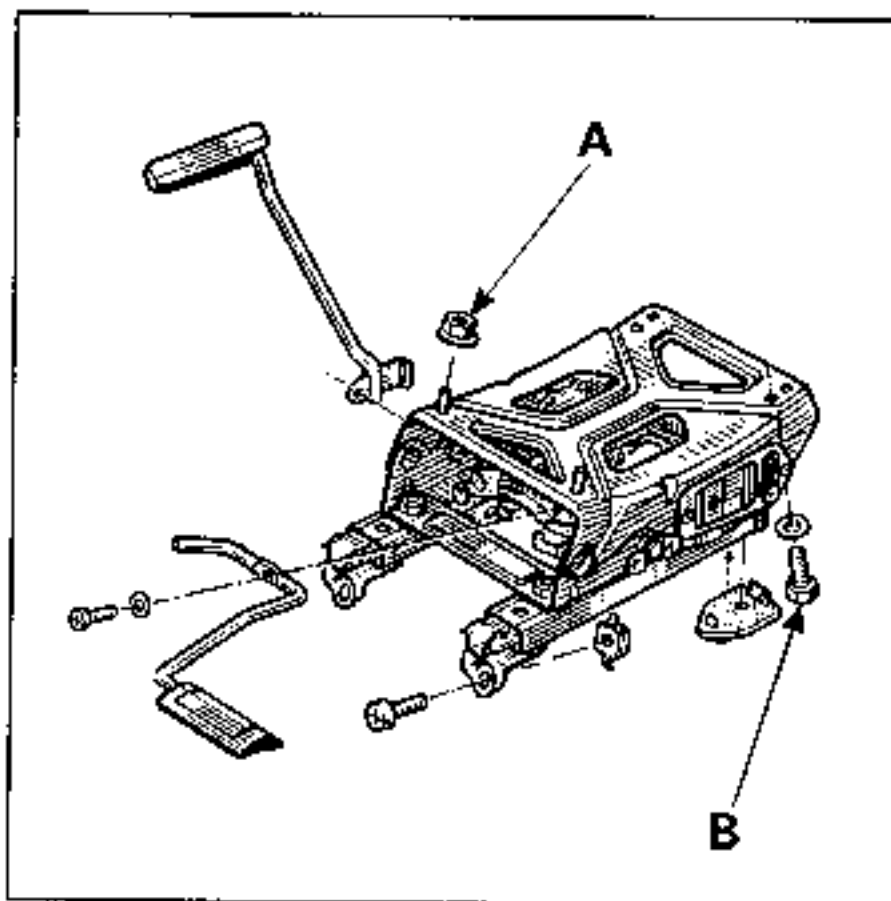

Disconnect the heated seat wiring harness.


Remove the seat.

Strip the seat cushion.

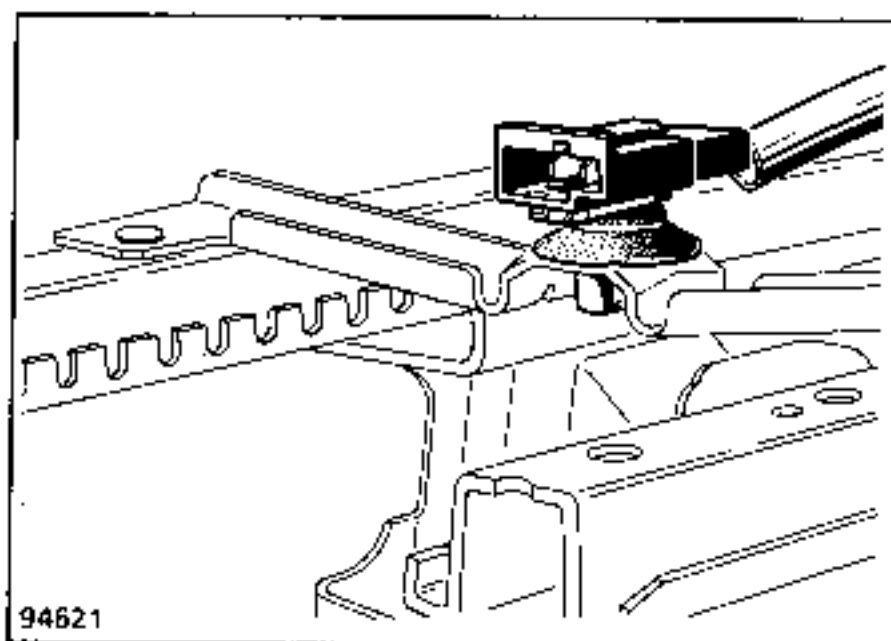


Unclip the connector from the set of slideways.

Remove the 2 nuts (A) and the 2 bolts (B) in order to separate the slideways from the frame.

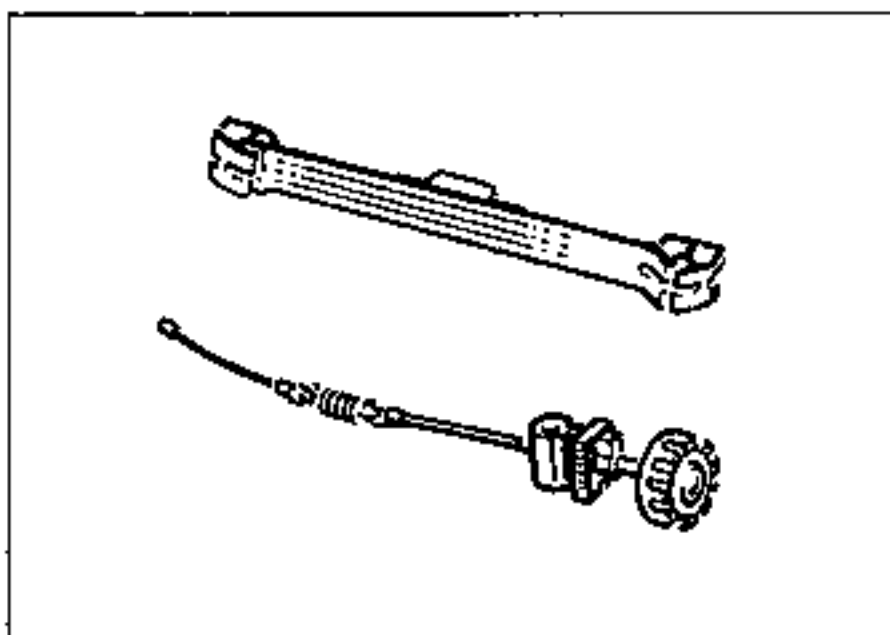


REMOVAL

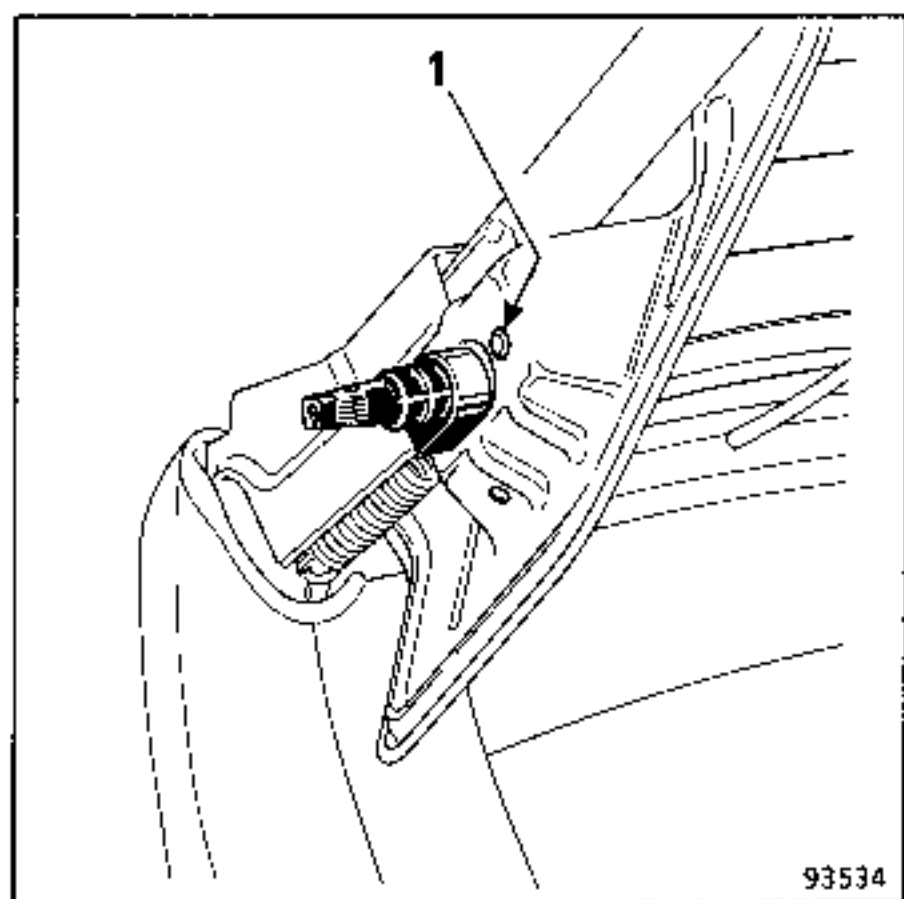


After stripping the seat back, adjust the mechanism so that it is in the slack position.

Remove rivet (1) securing the control.

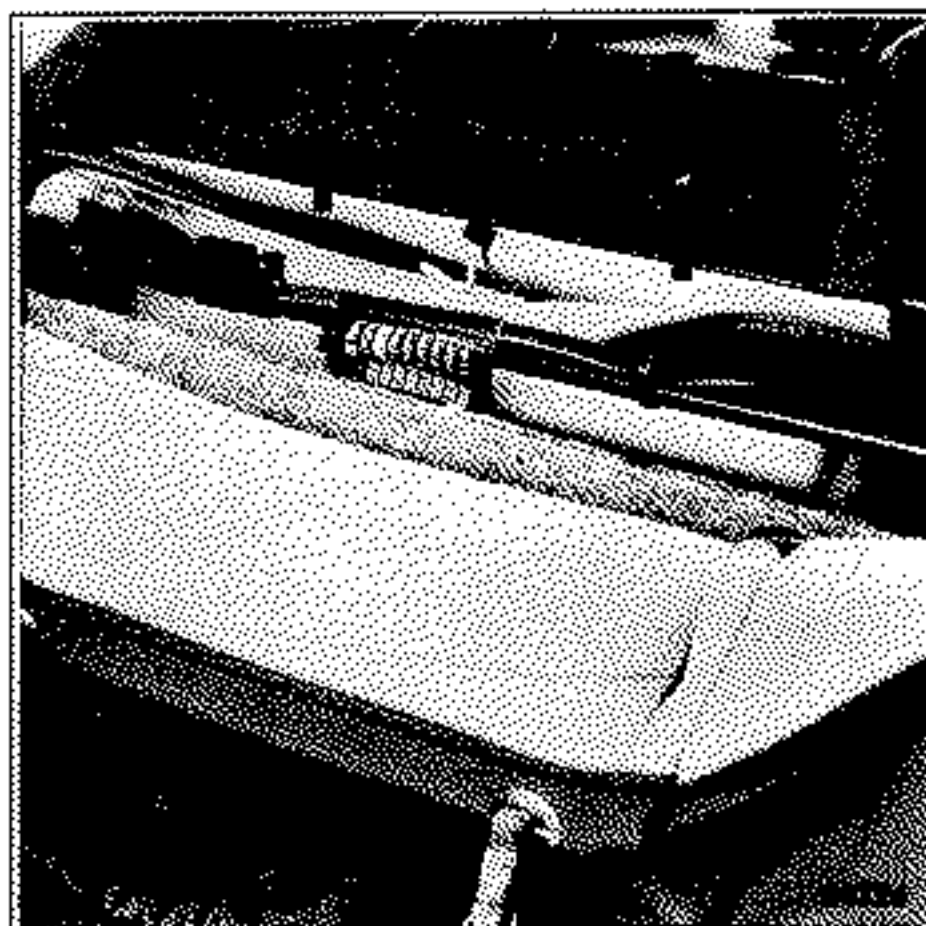


Using a pair of pliers, remove the cable stop so that the cable can be passed through the seat frame.

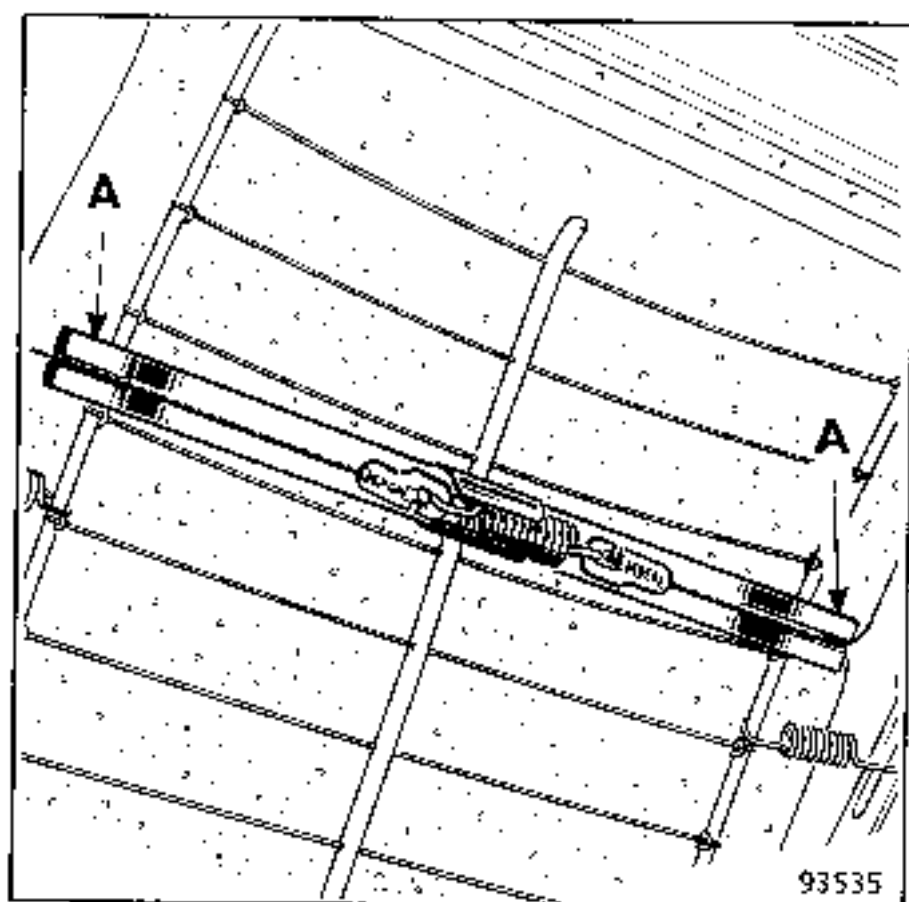


Unclip plastic guide (A).

On refitting, finish by assembling the
2 cables on the centre spring.

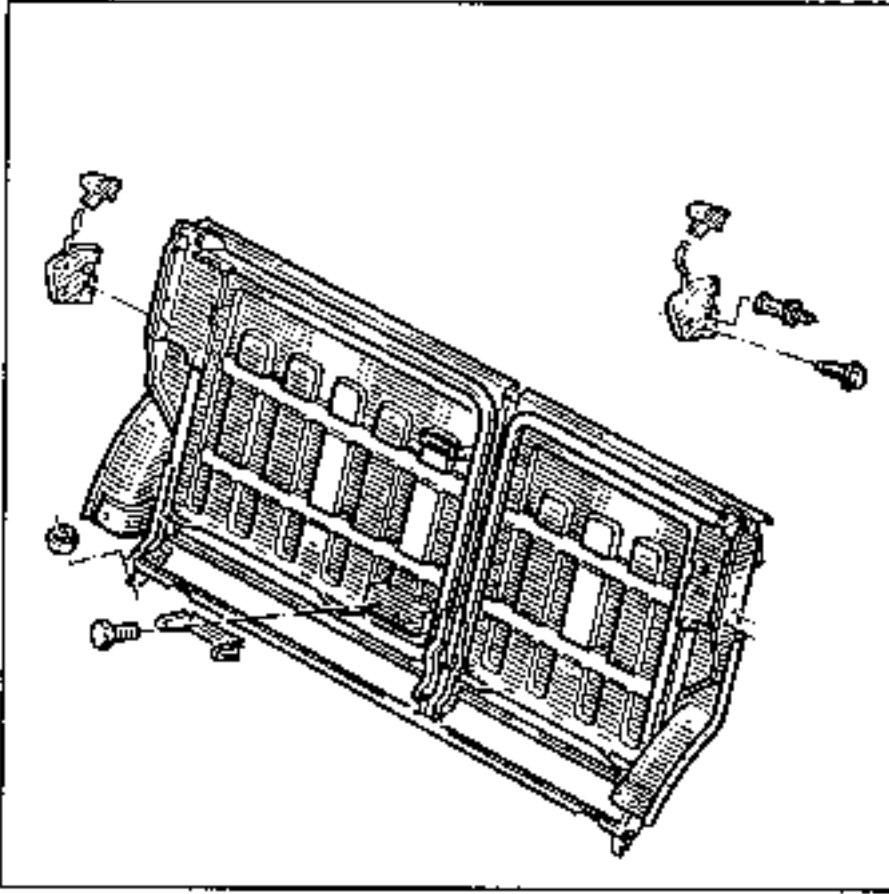


REMOVAL.

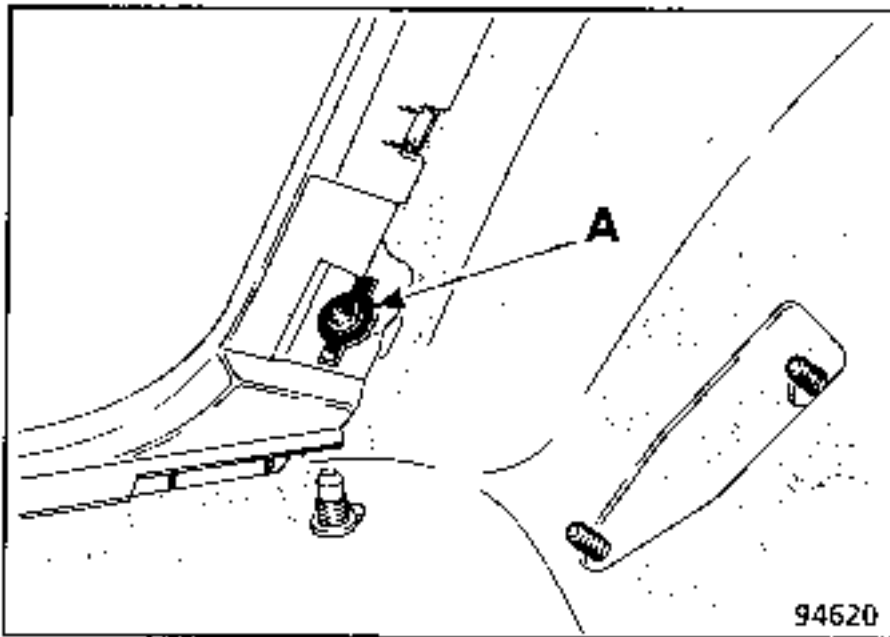

Unlock the seat locks.

Remove rear lower seat belt mounting (A).


Remove the 4 mounting nuts.

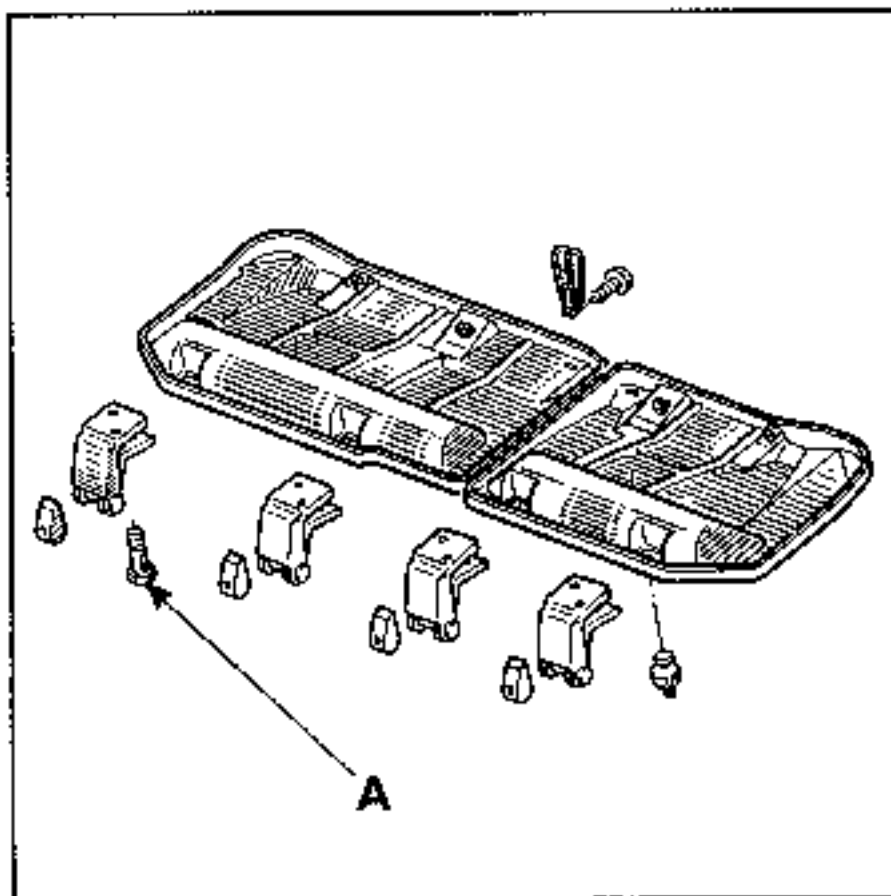

REMOVAL.

First tilt the seat cushions forwards.

Remove the bolts (A) from the component in question.

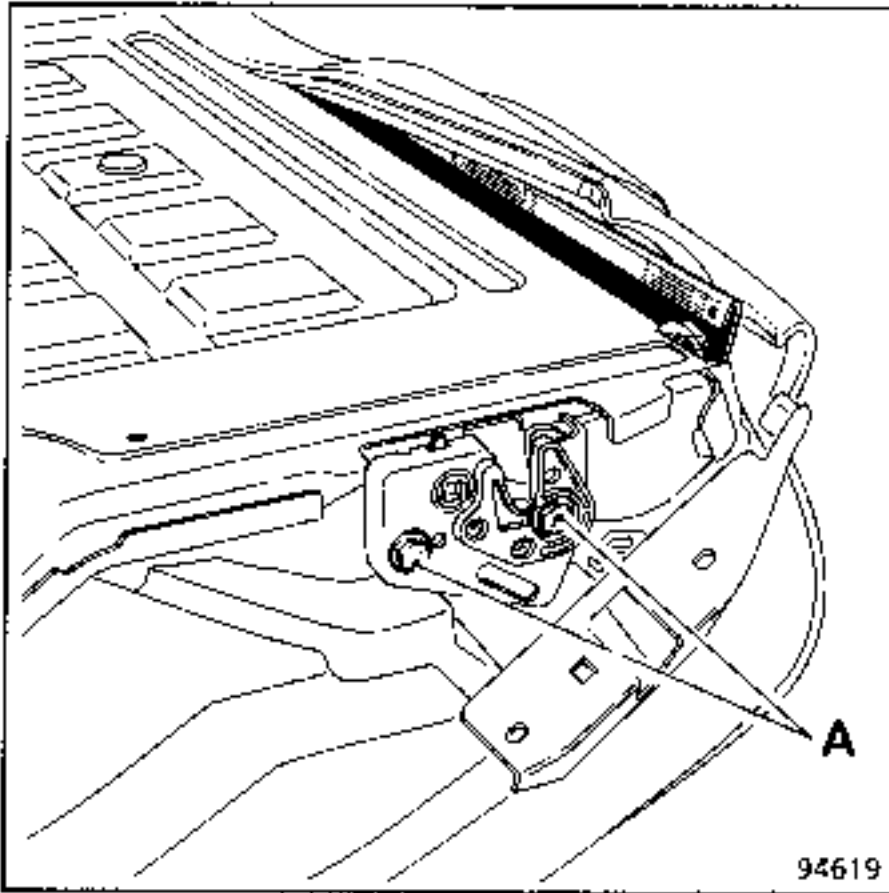


REMOVAL.

First strip the seat back in question.

Remove the lock by taking out the 2 bolts (A).




REMOVAL.

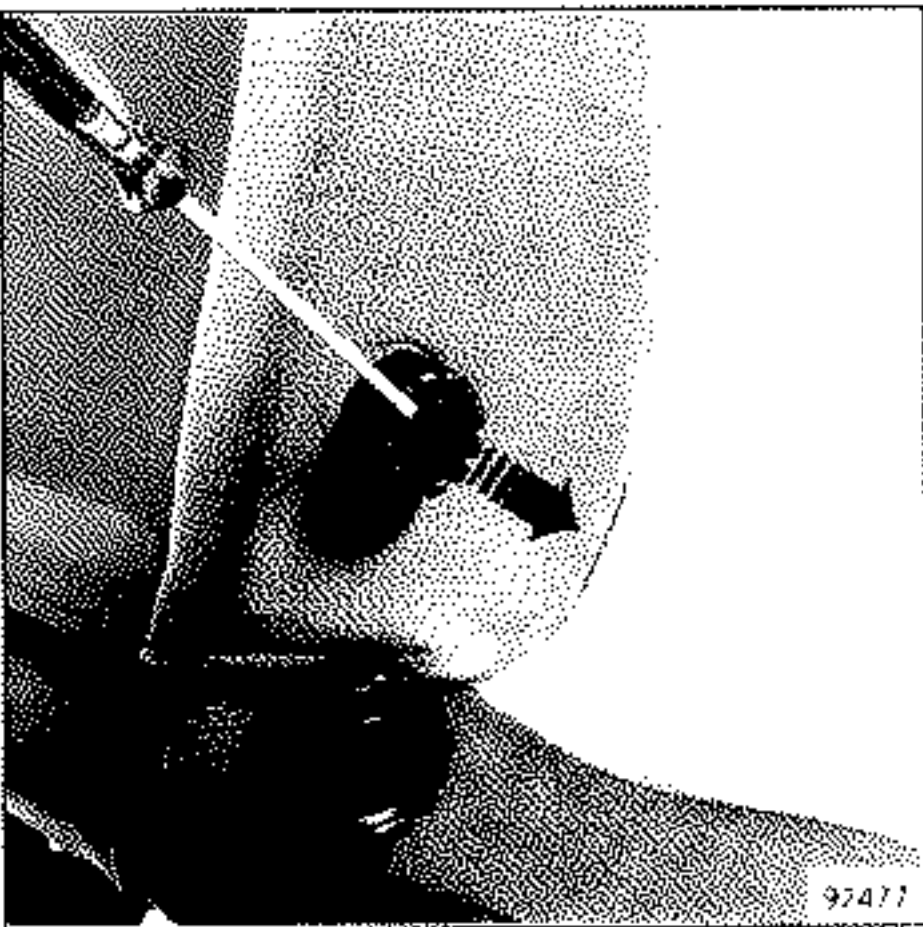


First remove the seat.

Remove the cover and handle for
the lumbar adjustment.

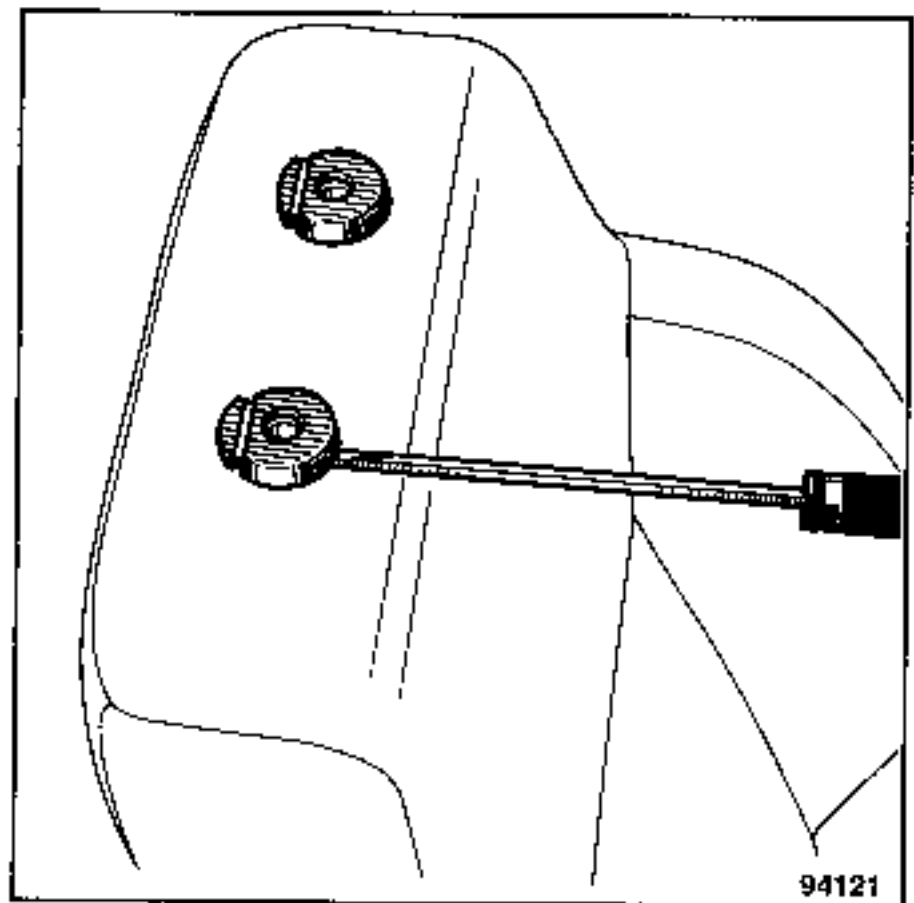


Unclip the upper parts of the head
restraint guides.

Remove the 2 hooks holding the trim
under the seat.

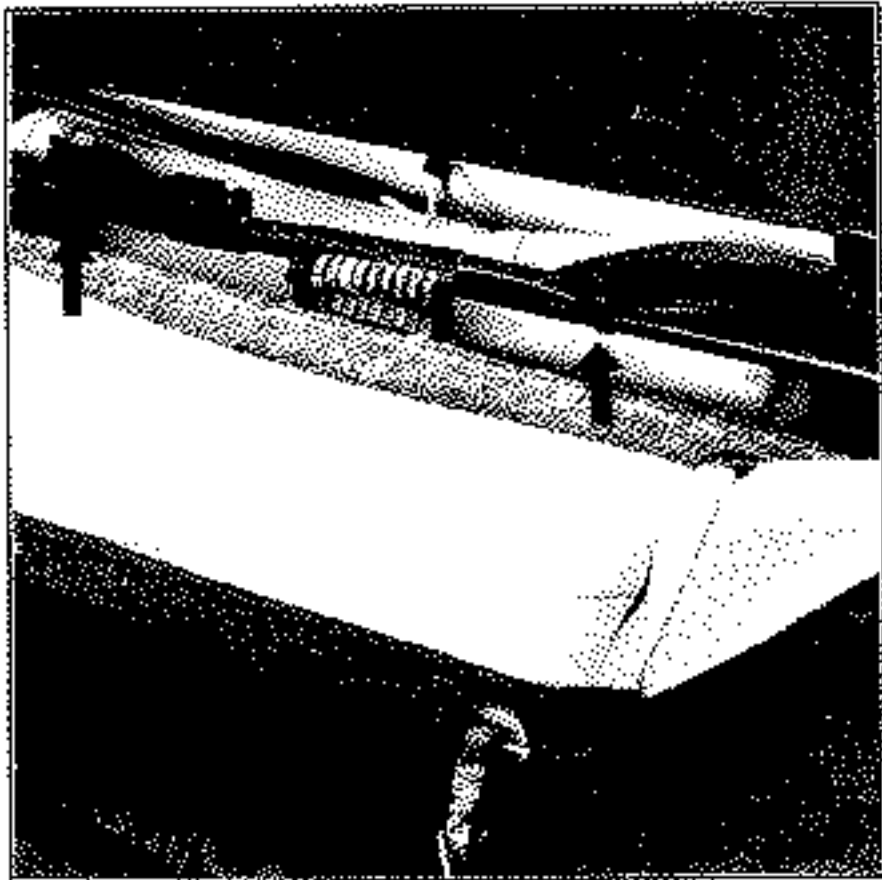

Disconnect the connector from the heating system.



Unclip the 2 clips.

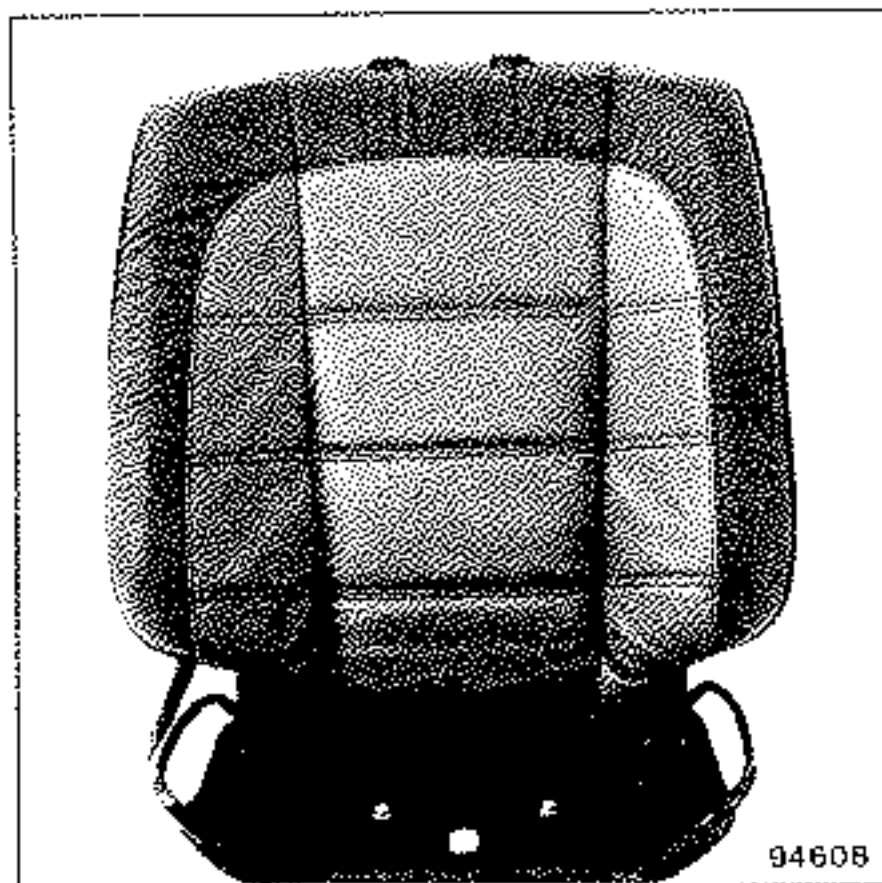



Cut out the 2 "pigs nose" clips.

NOTE:

When refitting the trim, remember to reconnect the connector for the heating system.

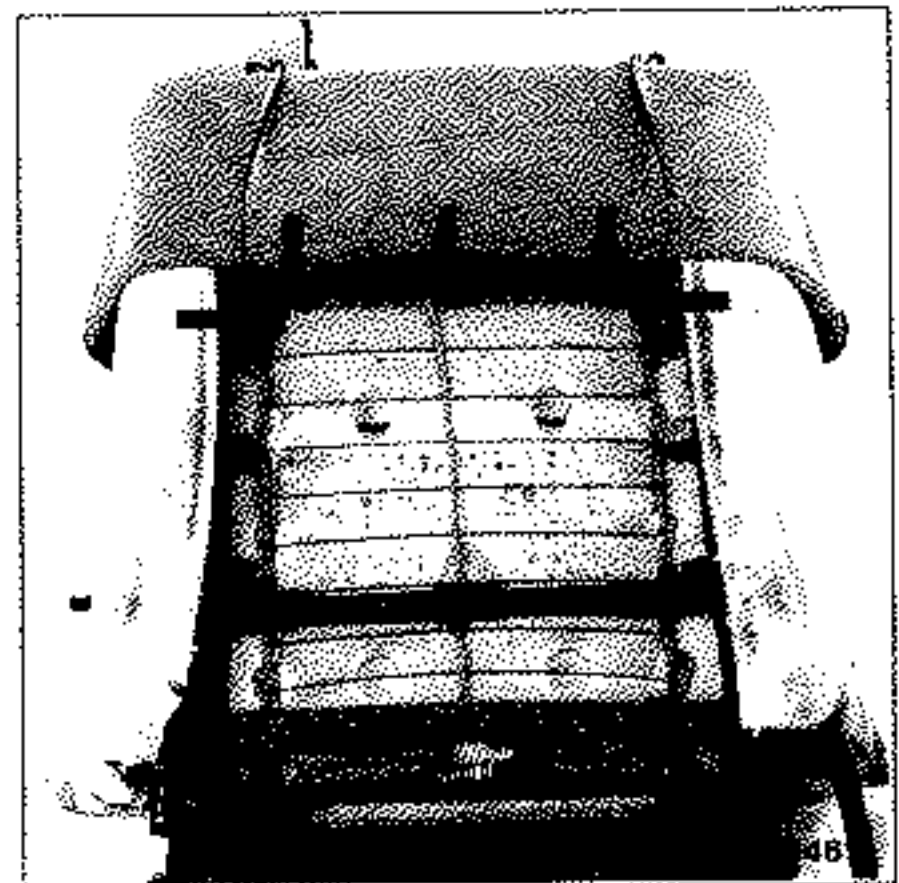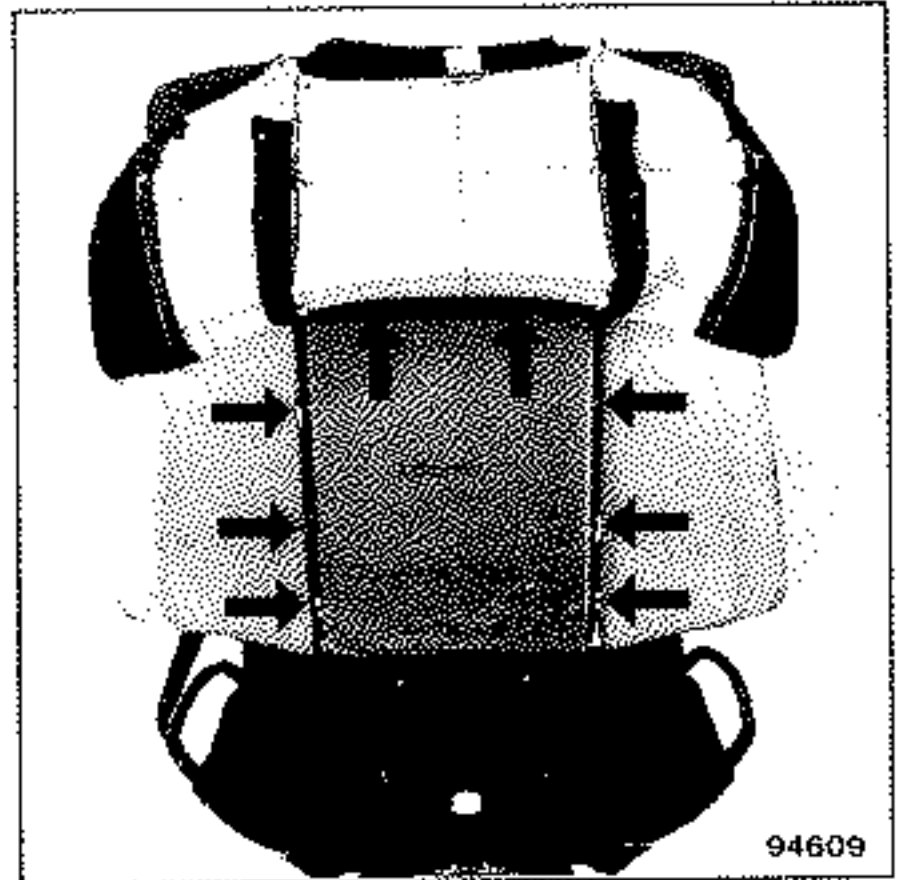

Carefully pushing up the trim, cut the "pigs nose" type clips.

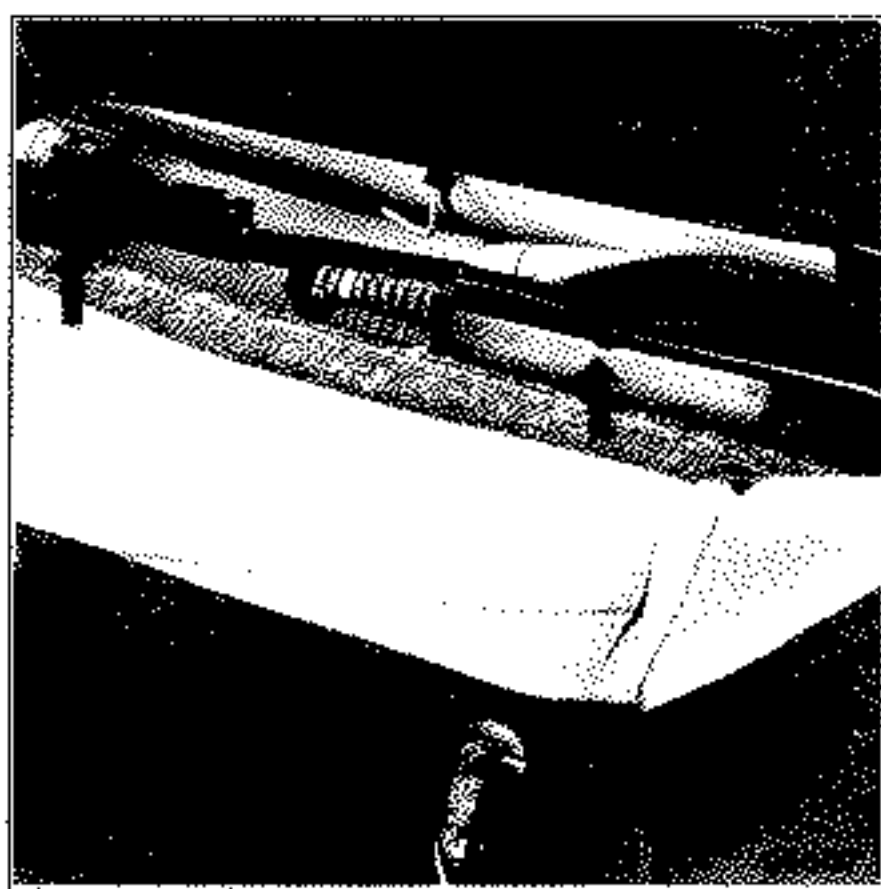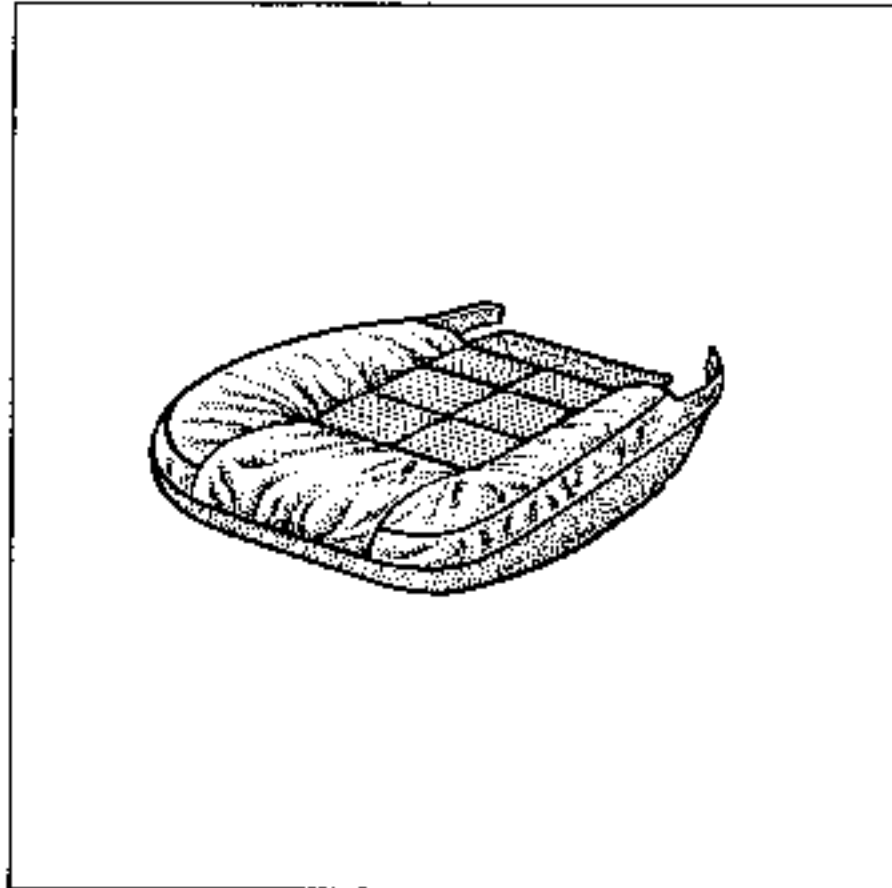


First, remove the seat.

Unfasten the 2 hooks.

Cut the 2 "pigs nose" type clips.

Cut the heating system mounting clips.


Disconnect the wiring harness from the heating system and unclip it from the set of slideways.

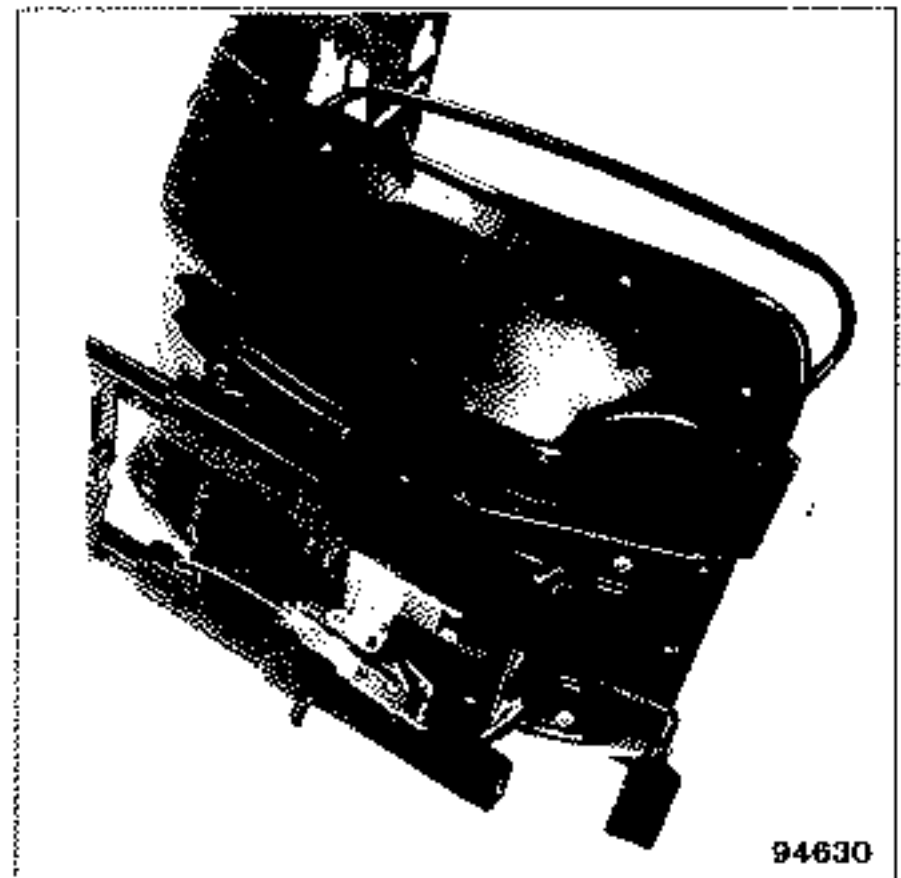

94630

Lift/pick the edge of the trim.


Remove the trim-foam assembly.

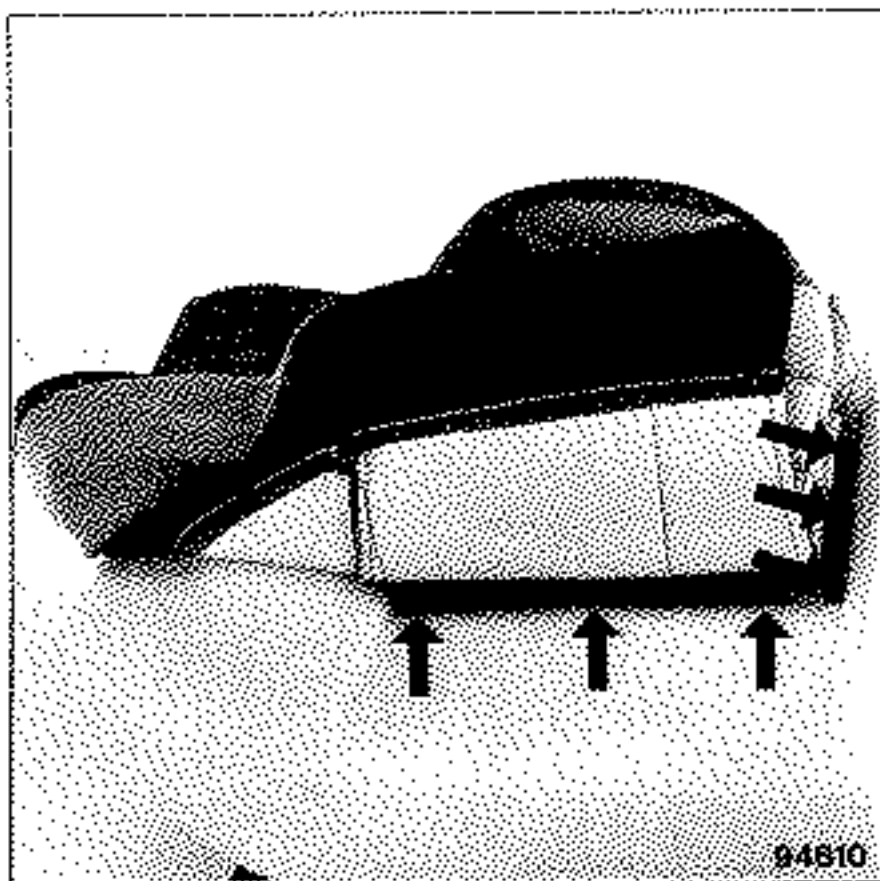

Separate the trim from the foam by cutting the "pigs nose" type clips.


NOTE:

When refitting the trim, remember to reconnect the heating system connector.

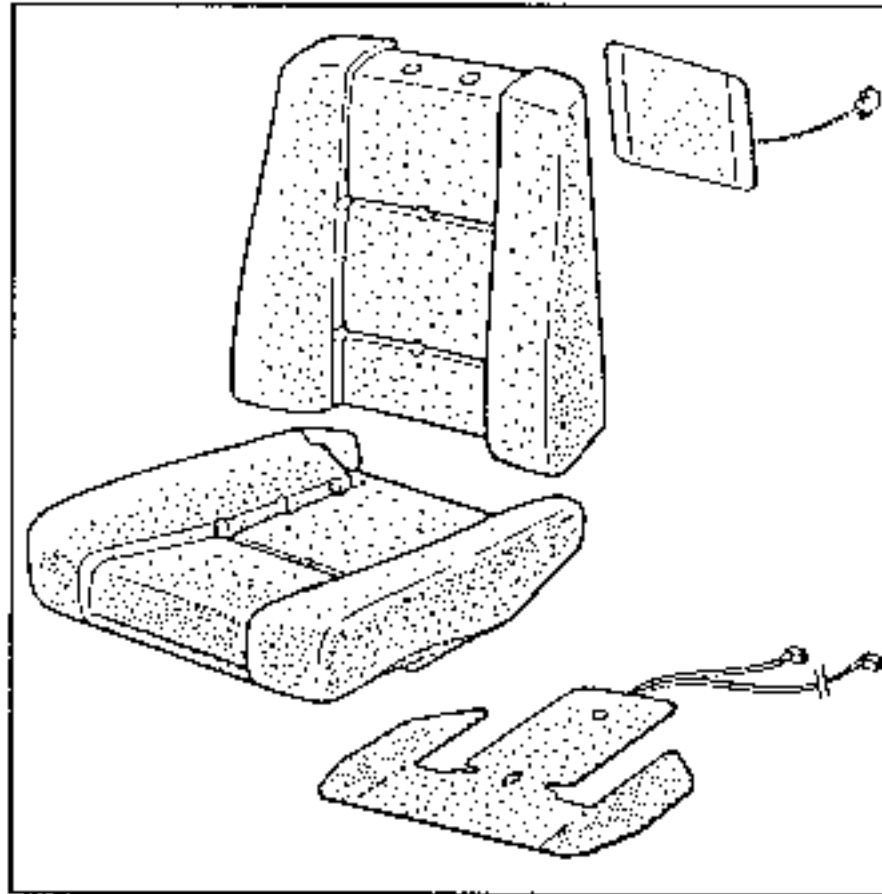


Seat Back Part No: 7700 809 758
Seat Cushion Part No: 7700 809 757

REMOVAL


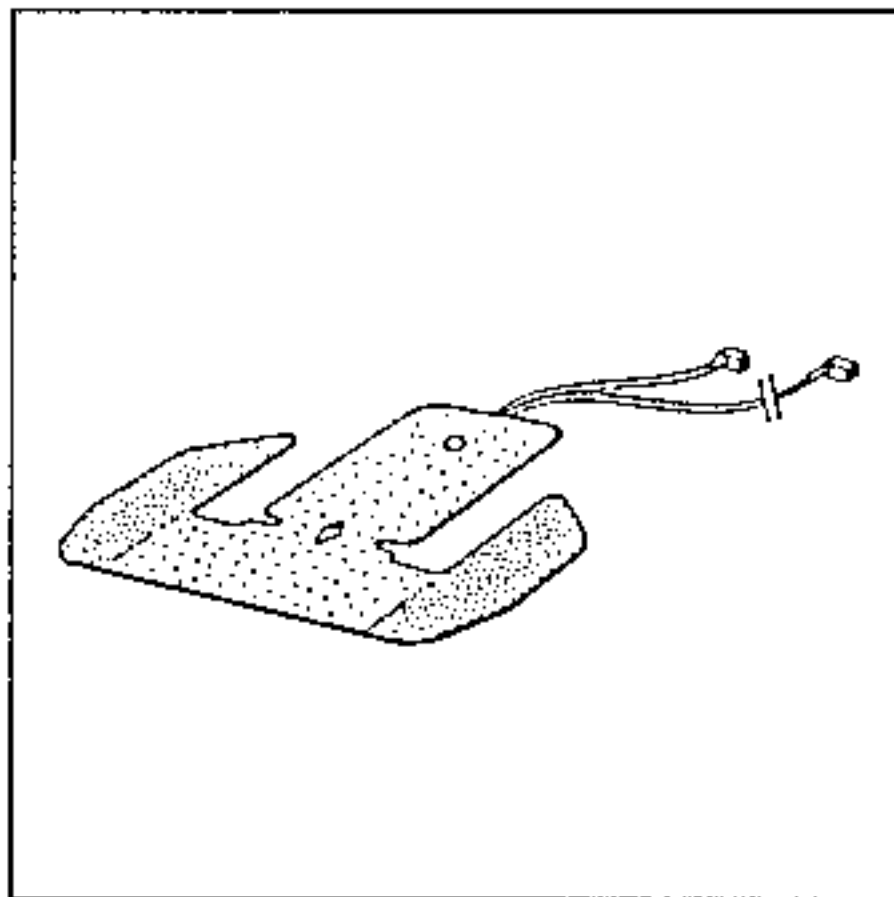


First strip the component in question.
Carefully separate the heating device
from the foam.

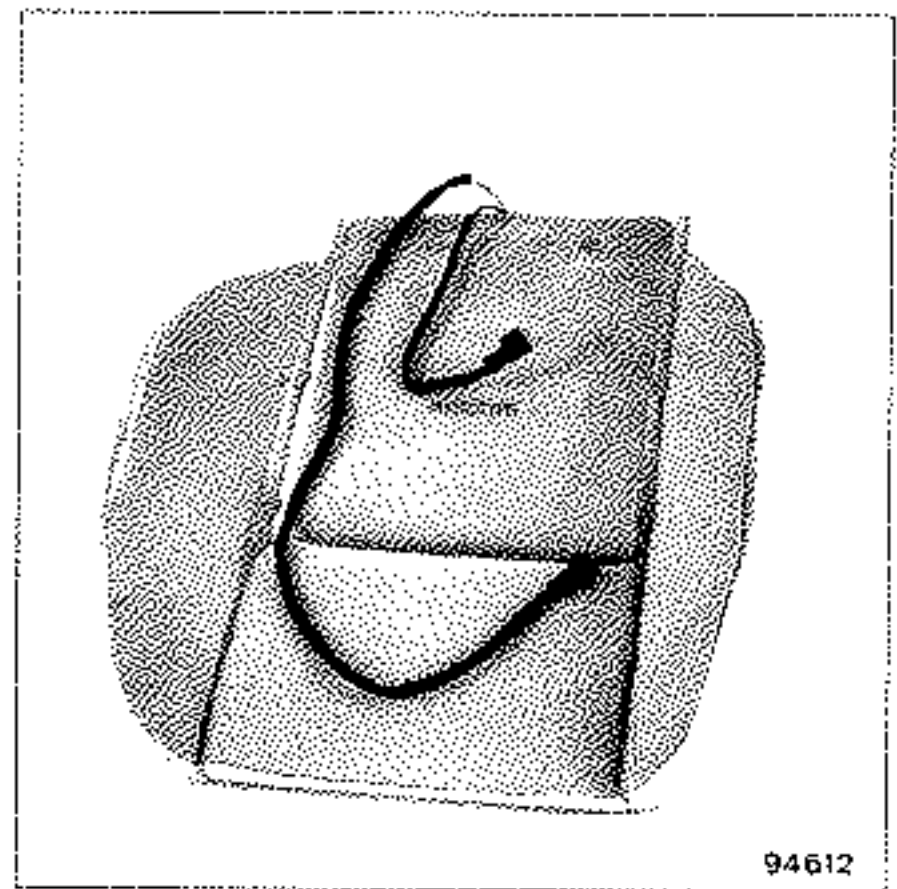


94612

On refitting, just stick the system
back in the same position.

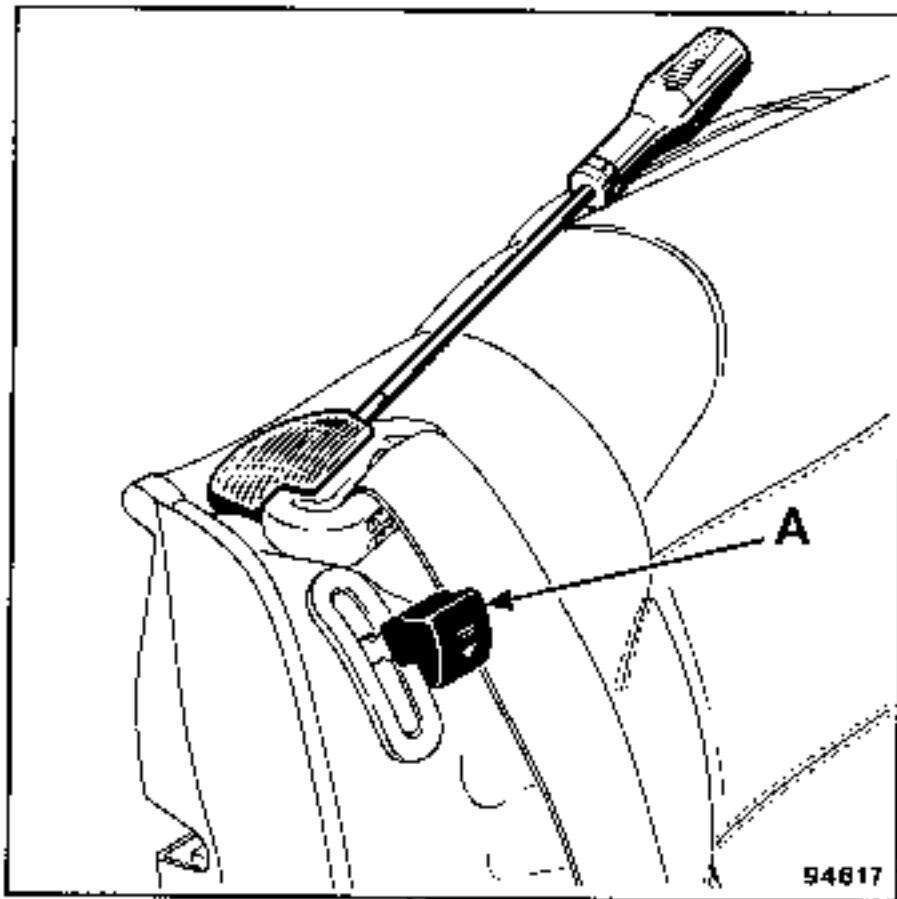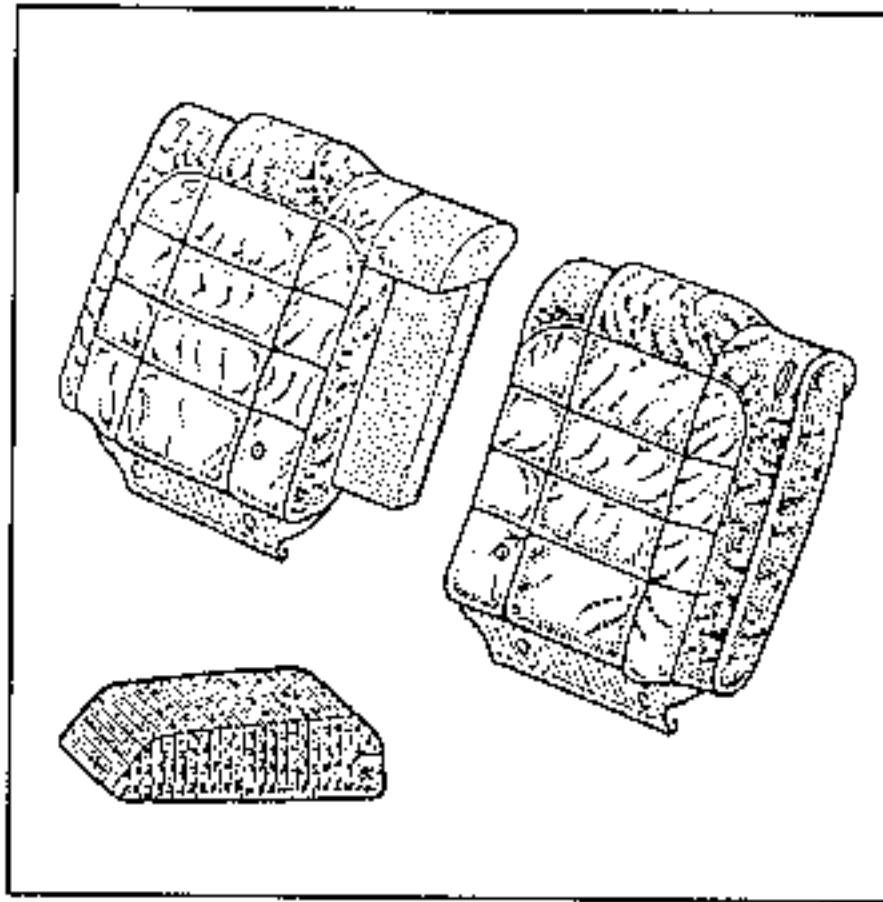


After removing the seat, remove handle (A).


Remove the upper seat belt mounting cover.

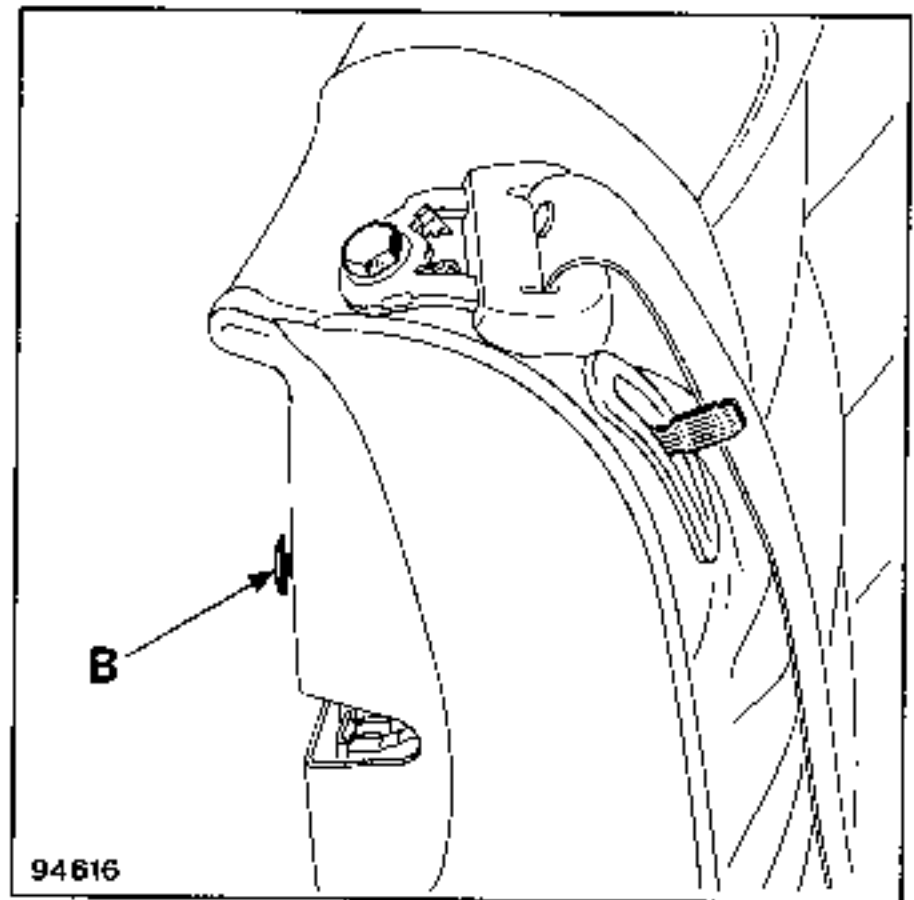



Remove clips (B) from the lock cover.

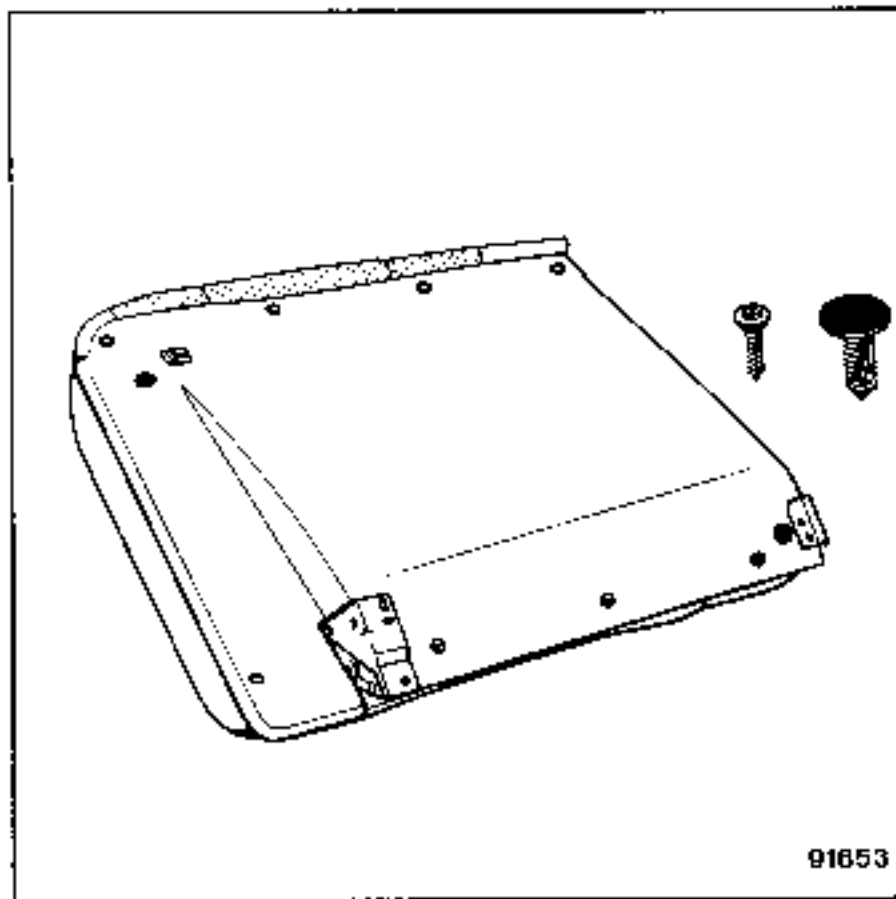


Remove the rear cover (pressure stud type clips).

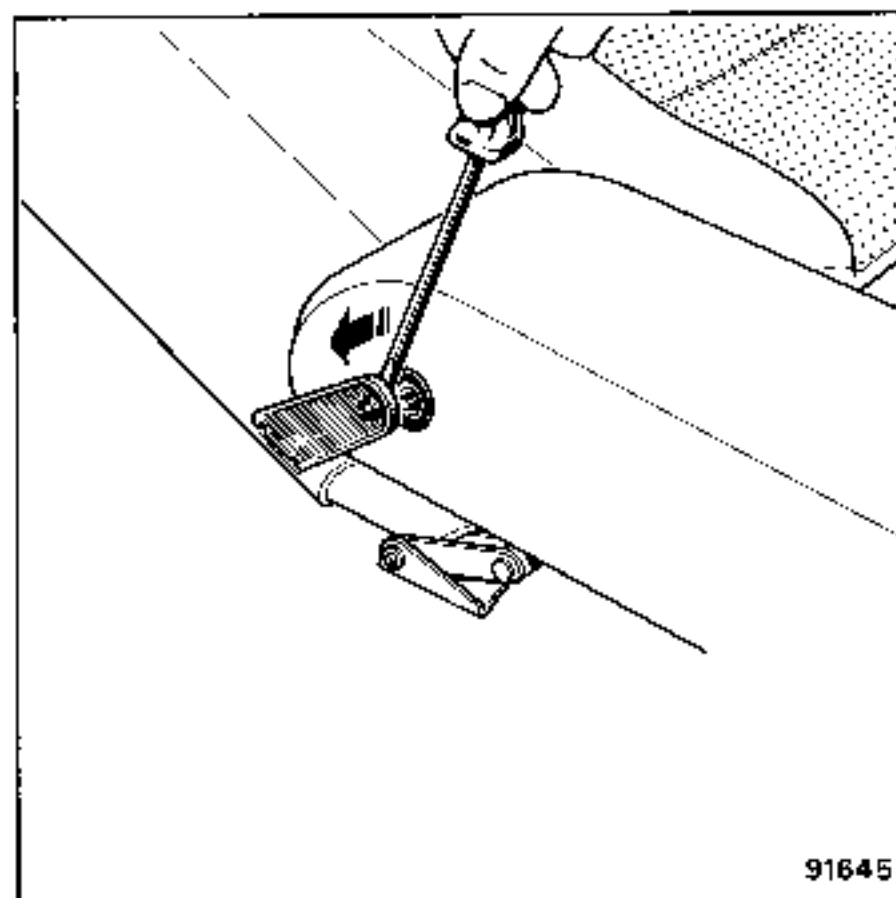


Remove the central arm rest.

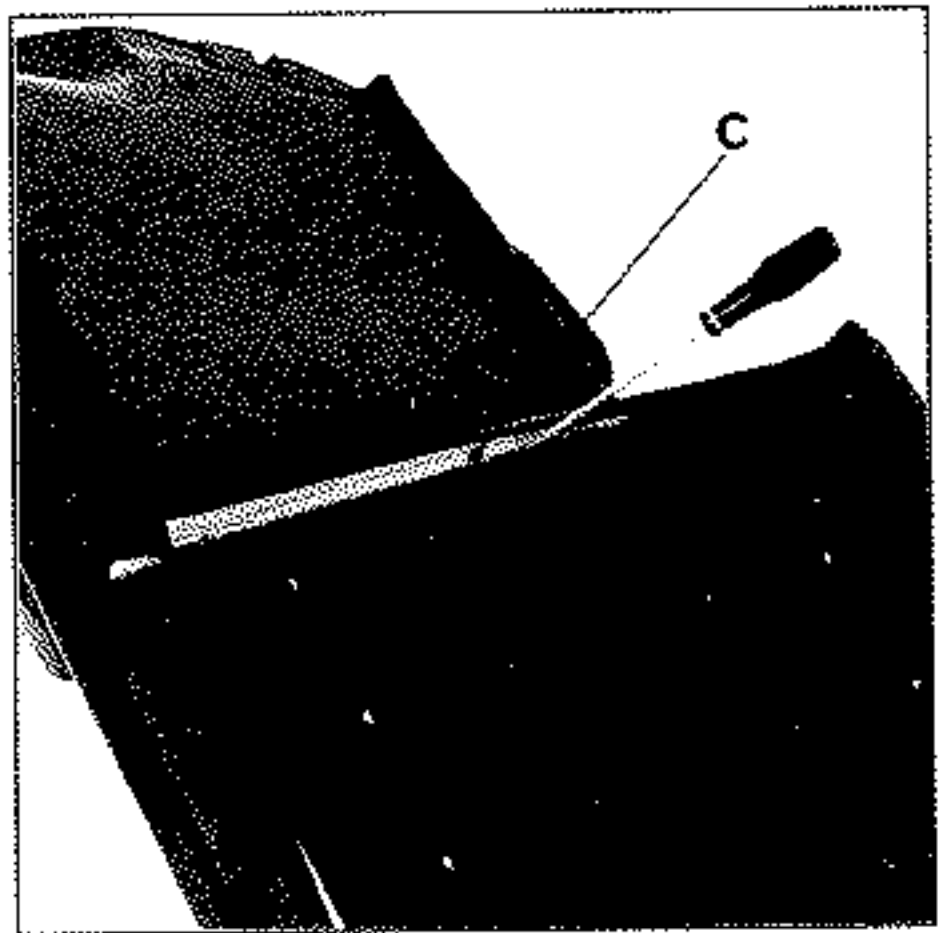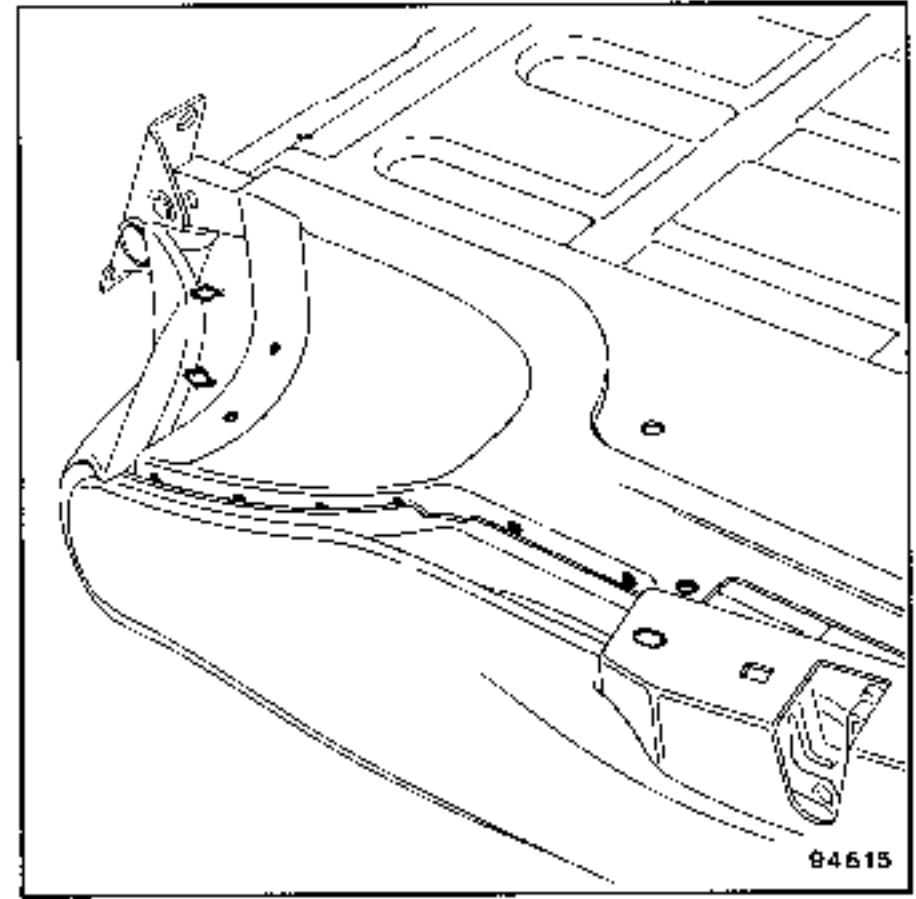



Removes edges (C) from the trim with great care.

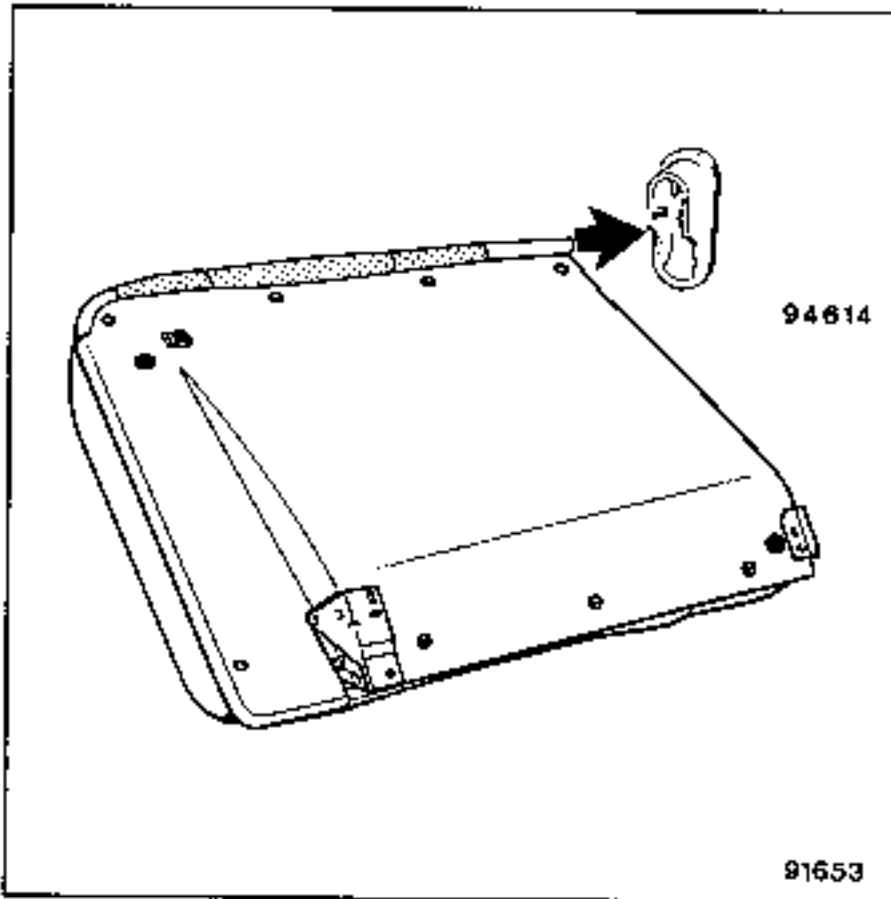

Remove the clips.

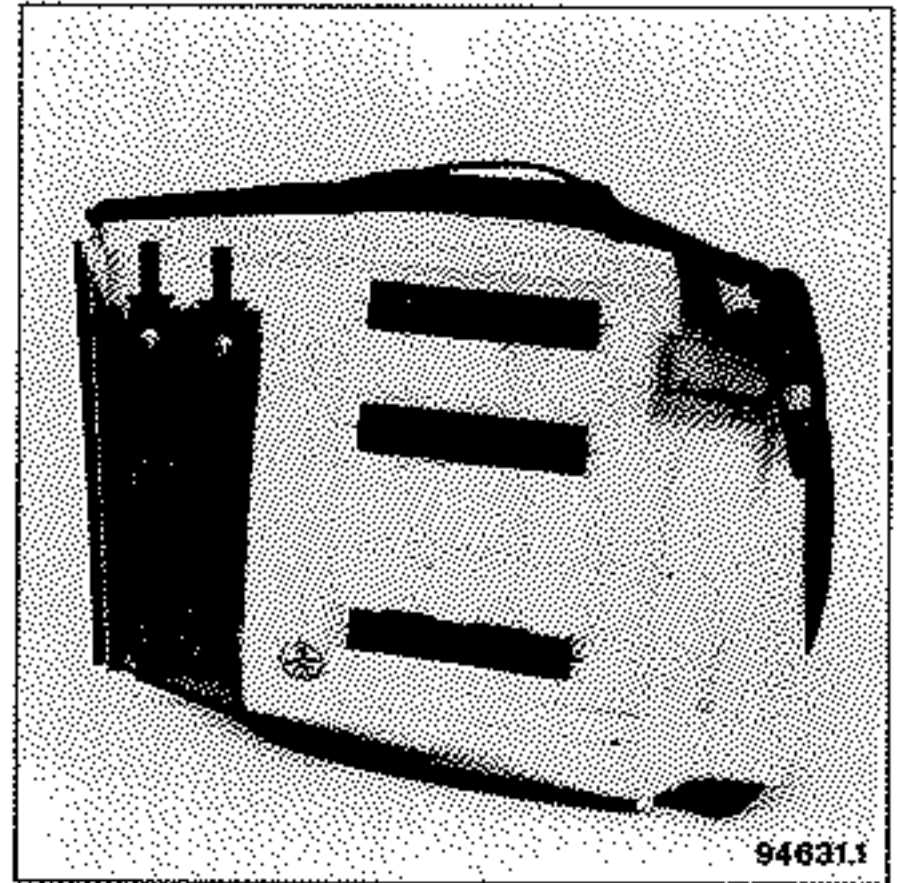


Unclip the 2 clips under the trim.

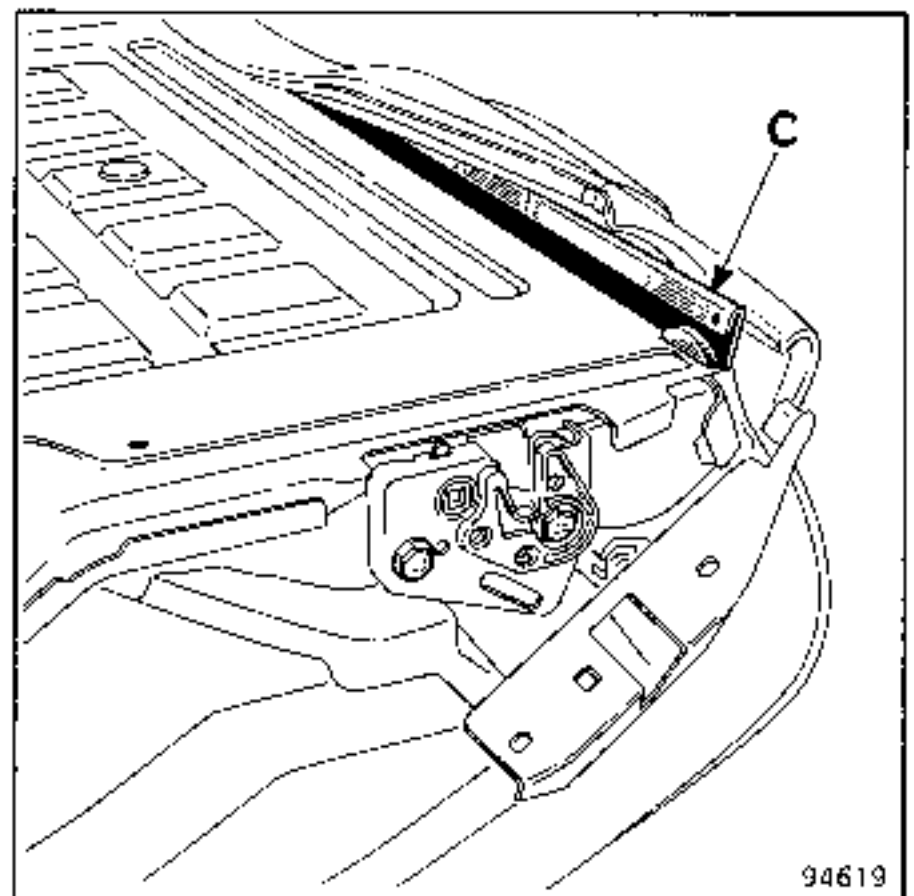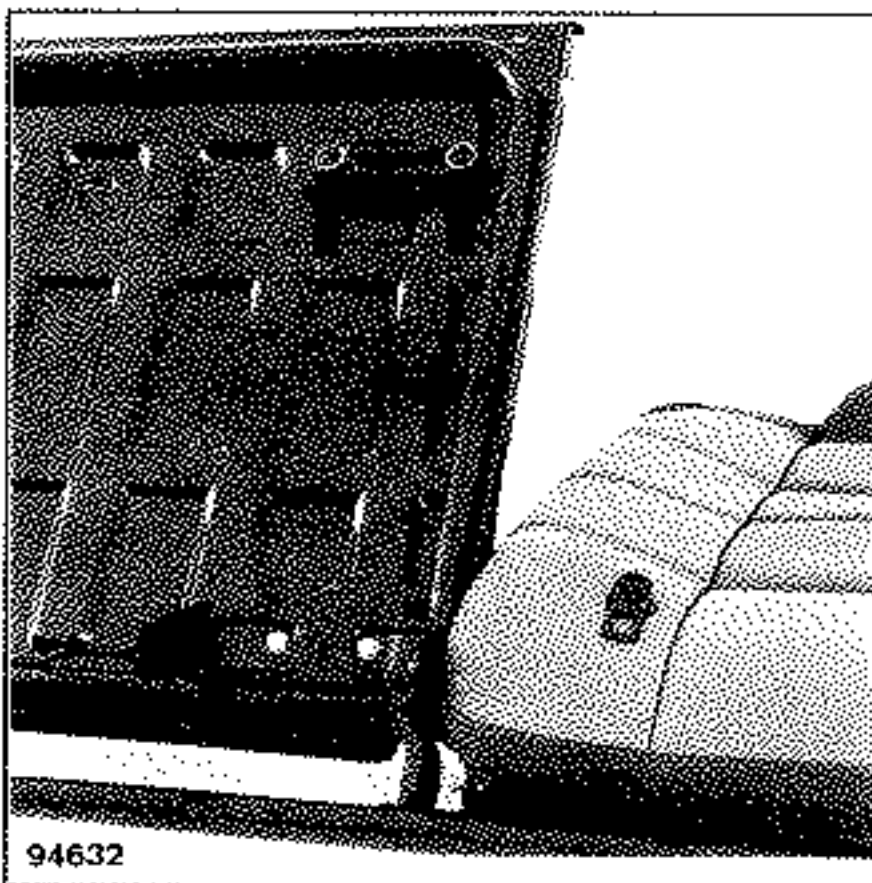

Pass the seat belt through the trim.


Unclip the upper edge (C).

Remove the trim foam assembly.

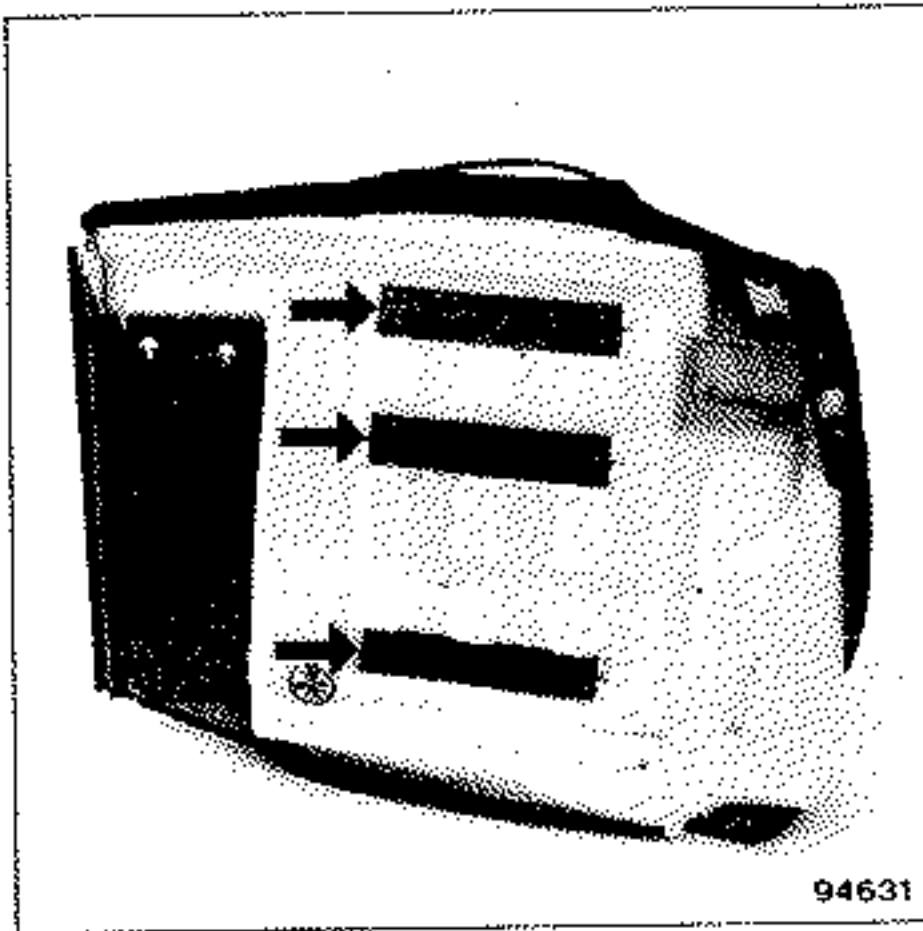


Remove the circular clip.

Separate the trim, passing the card through the foam.

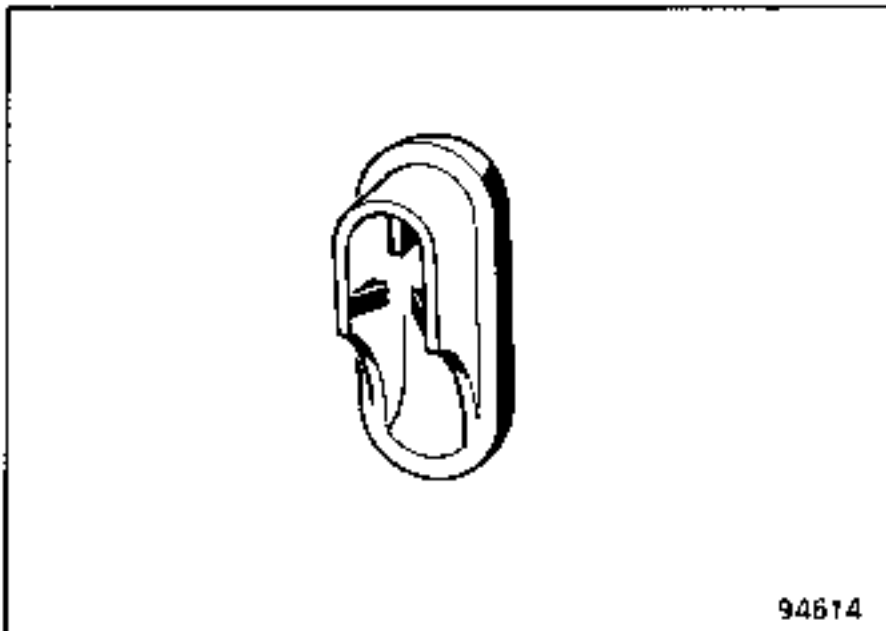


NOTE:


On refitting, refit the end pieces to the frame before positioning the trim.

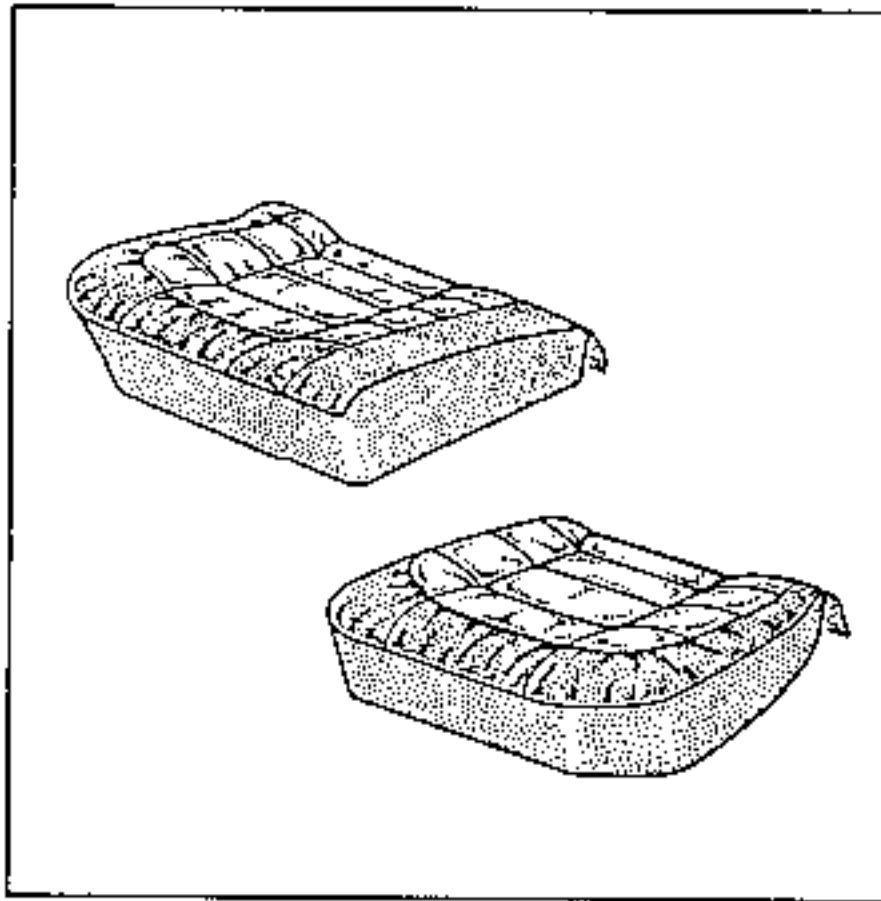

REMOVAL

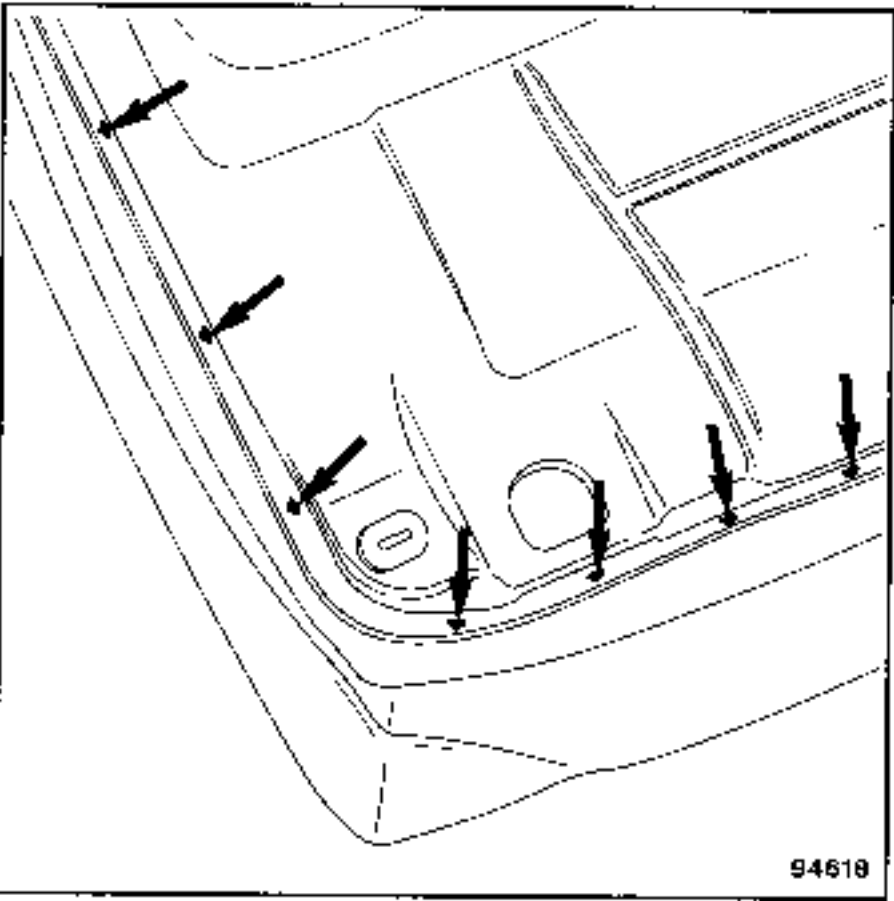

First remove the part in question.
Unclip the trim from the frame with great care.

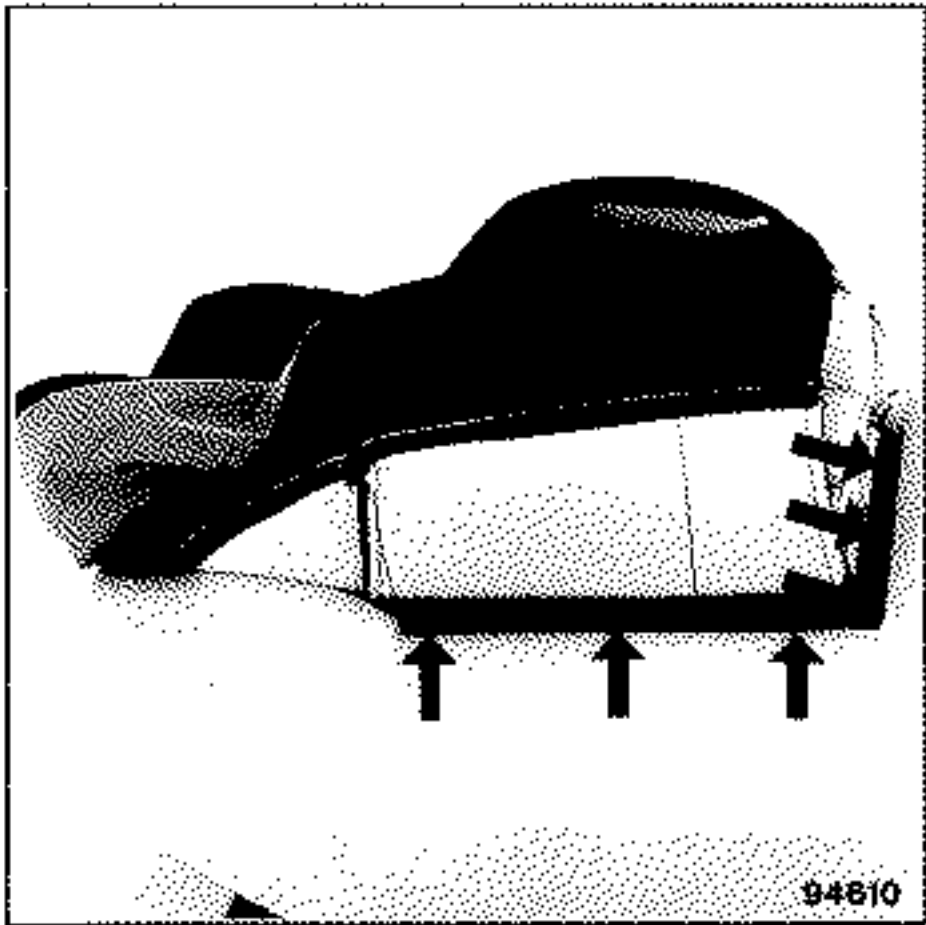

Remove the trim-foam assembly.
Cut the "pig's nose" type clips in order to separate the trim.